# Technical Information **Proline Promass H 500**

Coriolis flowmeter

**Products** 



## The chemically resistant single-tube flowmeter, as remote version with up to 4 I/Os

#### Application

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- Highly accurate measurement of liquids and gases in applications requiring excellent corrosion resistance

#### Device properties

- Measuring tube made of tantalum and zirconium
- Nominal diameter: DN 8 to 50 ( $\frac{3}{8}$  to 2")
- Medium temperature up to +205 °C (+401 °F)
- Remote version with up to 4 I/Os
- Backlit display with touch control and WLAN access
- Standard cable between sensor and transmitter

#### Your benefits

- Max. Maximum safety for chemically aggressive fluids corrosion-resistant wetted parts
- Fewer process measuring points multivariable measurement (flow, density, temperature)
- Space-saving installation no inlet/outlet run needs
- Full access to process and diagnostic information numerous, freely combinable I/Os and fieldbuses
- Reduced complexity and variety freely configurable I/O functionality
- Integrated verification Heartbeat Technology



## Table of contents

Document information		Storage temperature	50
Symbols used	4	Climate class	50
		Degree of protection	50
Eunstian and system design	5	Vibration resistance	50
Function and system design		Shock resistance	50
Measuring principle		Impact resistance	50
Measuring system		Interior cleaning	50
Equipment architecture		Electromagnetic compatibility (EMC)	50
Safety	. 9	,	
		Process	51
Input		Medium temperature range	
Measured variable	11	Density	51
Measuring range		Pressure-temperature ratings	51
Operable flow range	11	Secondary containment pressure rating	52
Input signal	12	Flow limit	53
		Pressure loss	53
Output	14	System pressure	53
Output and input variants		Thermal insulation	رر 53
	15	Heating	54
Output signal		9	55
Signal on alarm		Vibrations	ככ
	20		
Low flow cut off	21	Mechanical construction	56
Galvanic isolation	21	Dimensions in SI units	56
Protocol-specific data	21	Dimensions in US units	61
		Weight	66
Power supply	27		66
Terminal assignment		Process connections	69
Device plugs available		Surface roughness	69
Pin assignment, device plug		<b>3</b>	
Supply voltage	29	On h:1:	۲0
Power consumption		Operability	
Current consumption		Operating concept	
Power supply failure	29	Languages	
Electrical connection	29	Local operation	
Potential equalization	37		
Terminals	37	Service interface	73
Cable entries	38	Supported operating tools	
Cable specification		HistoROM data management	75
		Coult Control on Louis and	77
Performance characteristics	41	Certificates and approvals	
reference operating conditions	41	CE mark	
Maximum measured error		C-Tick symbol	
Repeatability	43	Ex approval	
Response time	43	Functional safety	
Influence of ambient temperature	43	HART certification	
Influence of medium temperature	43	FOUNDATION Fieldbus certification	
Influence of medium pressure	44	Certification PROFIBUS	
Design fundamentals	44	Modbus RS485 certification	80
z corgin ramaminemento e e e e e e e e e e e e e e e e e e e		1 1	80
		Radio approval	
Installation		Additional certification	
Mounting location		Other standards and guidelines	81
Orientation	46		
Inlet and outlet runs	47	Ordering information	82
Mounting the transmitter housing	48	<del></del>	
Special mounting instructions	49	Application packages	פס
		Application packages	
Environment		Heartbeat Technology	
Ambient temperature range	49	The state of the s	54

Concentration	83
Accessories  Device-specific accessories  Communication-specific accessories  Service-specific accessories  System components	83 84 85
Supplementary documentation         Standard documentation         Supplementary device-dependent documentation	86
Registered trademarks	87

## **Document information**

#### Symbols used Electrical symbols

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{\sim}$	Direct current and alternating current
<u></u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.
<b>♦</b>	<b>Equipotential connection</b> A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

#### Communication symbols

Symbol	Meaning
<b></b>	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
*	Bluetooth Wireless data transmission between devices over a short distance.
•	LED Light emitting diode is off.
<u></u>	LED Light emitting diode is on.
	<b>LED</b> Light emitting diode is flashing.

#### Symbols for certain types of information

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
<b>✓</b> ✓	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
	Reference to documentation
A=	Reference to page
	Reference to graphic
	Visual inspection

#### Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
<u>/EX</u>	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

## Function and system design

#### Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

 $F_c = 2 \cdot \Delta m (v \cdot \omega)$ 

 $F_c$  = Coriolis force

 $\Delta m = moving mass$ 


 $\omega = rotational velocity$ 

v = radial velocity in rotating or oscillating system

The amplitude of the Coriolis force depends on the moving mass  $\Delta m$ , its velocity v in the system and thus on the mass flow. Instead of a constant rotational velocity  $\omega$ , the sensor uses oscillation.

In the sensor, an oscillation is produced in the measuring tube. The Coriolis forces produced at the measuring tube cause a phase shift in the tube oscillations (see illustration):

- If there is zero flow (i.e. when the fluid stands still), the oscillation measured at points A and B has the same phase (no phase difference) (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

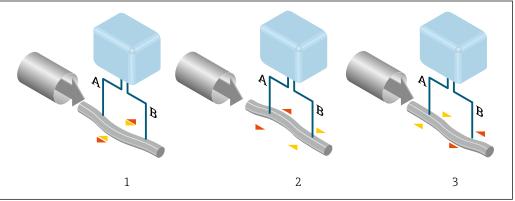

A002993

The phase difference (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is created by exciting an eccentrically arranged swinging mass to antiphase oscillation. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

#### **Density measurement**

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and fluid) results in a corresponding, automatic adjustment in the oscillation frequency. Resonance frequency is thus a function of medium density. The microprocessor utilizes this relationship to obtain a density signal.

#### Volume measurement

Together with the measured mass flow, this is used to calculate the volume flow.

#### Temperature measurement

The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.

#### Measuring system

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by one connecting cable(s).

#### Transmitter

Two versions of the transmitter are available.


Proline 500 – digital	Proline 500	
For use in applications not required to meet special requirements due to ambient or operating conditions.	For use in applications required to meet special requirements due to ambient or operating conditions.	
1 Transmitter 2 Connecting cable: cable, separate, standard 3 Sensor connection housing with integrated ISEM	1 Transmitter with integrated ISEM 2 Connecting cable: cable, separate 3 Sensor connection housing	
<ul> <li>Flexible and cost-effective separate installation.</li> <li>A standard cable can be used as the connecting cable.</li> </ul>	Application examples for sensors without electronics:  Strong vibrations at the sensor.  Sensor in underground installations.  Permanent immersion of sensor in water, IP68 ingress protection.	
<ul> <li>Electronics in the transmitter housing, ISEM (intelligent sensor electronics module) in the sensor connection housing</li> <li>Signal transmission: digital</li> <li>Order code for "Integrated ISEM electronics", option A "Sensor"</li> </ul>	<ul> <li>Electronics and ISEM (intelligent sensor electronics module) in the transmitter housing</li> <li>Signal transmission: analog         Order code for "Integrated ISEM electronics", option B "Transmitter"     </li> </ul>	
Connecting cable (can be ordered in various lengths → 🖺 83)		
<ul> <li>Length:</li> <li>Ex Zone 2, Class 1, Division 2: max. 300 m (1000 ft)</li> <li>Ex Zone 1, Class 1, Division 1: max. 150 m (500 ft)</li> <li>Standard cable with a common shield (pair-stranded)</li> </ul>	<ul> <li>Length: max. 20 m (65 ft)</li> <li>Cable with a common shield and individual shielded cores (3 pairs)</li> </ul>	
Ex zone		
Use in: Ex Zone 2, Class 1, Division 2	Use in: Ex Zone 1 and 2, Class 1, Division 2 and Class 1, Division 1	
Mixed installation is possible:  Sensor: Ex Zone 1, Class I, Division 1  Transmitter: Ex Zone 1, Class I, Division 1; Ex Zone 2, Class I, Division 2		
Device versions and materials		
<ul> <li>Transmitter housing</li> <li>Aluminum, coated: aluminum, AlSi10Mg, coated</li> <li>Material: polycarbonate</li> <li>Material of window in transmitter housing</li> <li>Aluminum, coated: glass</li> <li>Polycarbonate: plastic</li> </ul>	<ul> <li>Transmitter housing</li> <li>Aluminum, coated: aluminum, AlSi10Mg, coated</li> <li>Cast, stainless: cast, stainless steel, 1.4409 (CF3M) similar to 316L</li> <li>Window material: glass</li> </ul>	
Configuration		

- External operation via 4-line, backlit, graphic local display with touch control and guided menus ("Make-it-run" wizards) for application-specific commissioning.
- Via service interface or WLAN interface:


  - Operating tools (e.g. FieldCare, DeviceCare)Web server (access via Web browser, e.g. Microsoft Internet Explorer, Microsoft Edge)

#### Sensor connection housing

Different versions of the connection housing are available.

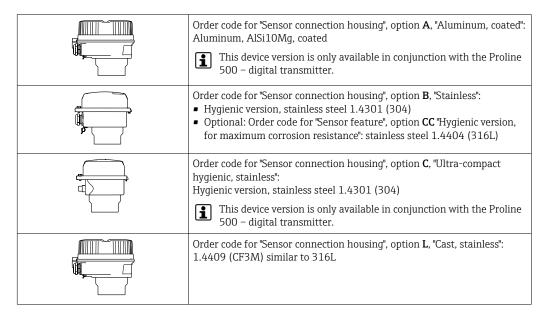


#### Sensor

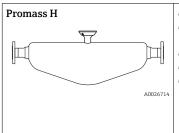

- Single bent tube
- Simultaneous measurement of flow, volume flow, density and temperature (multivariable)
- Minimal pressure losses and chemical-resistant materials
- Nominal diameter range: DN 8 to 50 (3/8 to 2")
- Materials:
  - Sensor: stainless steel, 1.4301 (304)
  - Measuring tubes: zirconium 702 (UNS R60702); tantalum 2.5W
  - Process connections: stainless steel, 1.4301 (304), wetted parts: zirconium 702 (UNS R60702); tantalum

#### Equipment architecture

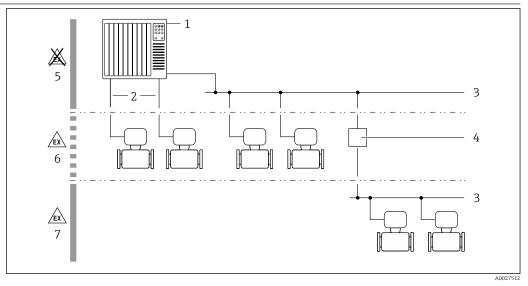

■ 1 Possibilities for integrating measuring devices into a system

- 1 Control system (e.g. PLC)
- 2 Connecting cable (0/4 to 20 mA HART etc.)
- 3 Fieldbus
- 4 Segment coupler
- 5 Non-hazardous area
- 6 Non-hazardous area and Zone 2/Div. 2
- 7 Hazardous area and Zone 1/Div. 1

8

#### Safety

#### IT security

We only provide a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

#### **Device-specific IT security**

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered.

#### Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code

  Protect write passes to the device passes.
  - Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Is equivalent to hardware write protection in terms of functionality.
- WLAN passphrase The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.

#### User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code.

When the device is delivered, the device does not have an access code and is equivalent to 0000 (open).

#### WLAN passphrase

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.

#### Access via fieldbus

When communicating via fieldbus, access to the device parameters can be restricted to "Read only" access. The option can be changed in the **Fieldbus writing access** parameter.

This does not affect cyclic measured value transmission to the higher-order system, which is always guaranteed.

i

Additional information: "Description of Device Parameters" document pertaining to the device .

#### Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server . The connection is via the service interface (CDI-RJ45) or the WLAN interface.

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.



Additional information: "Description of Device Parameters" document pertaining to the device .

## **Input**

#### Measured variable

#### Direct measured variables

- Mass flow
- Density
- Temperature

#### Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

#### Measuring range

#### Measuring ranges for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	3/8	0 to 2 000	0 to 73.50
15	1/2	0 to 6 500	0 to 238.9
25	1	0 to 18 000	0 to 661.5
40	11/2	0 to 45 000	0 to 1654
50	2	0 to 70 000	0 to 2 573

#### Measuring ranges for gases

Measuring ranges only valid for Promass H with tantalum 2.5W.

The full scale values depend on the density of the gas and can be calculated with the formula below:  $\dot{m}_{max(G)} = \dot{m}_{max(F)} \cdot \rho_G : x$ 

m <sub>max(G)</sub>	Maximum full scale value for gas [kg/h]
m <sub>max(F)</sub>	Maximum full scale value for liquid [kg/h]
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{ max(G)}$ can never be greater than $\dot{m}_{ max(F)}$
$ ho_{G}$	Gas density in [kg/m³] at operating conditions
х	Constant dependent on nominal diameter

DN		х
[mm]	[in]	[kg/m³]
8	3/8	60
15	1/2	80
25	1	90
40	1½	90
50	2	90



#### Recommended measuring range

Operable flow range

Over 1000:1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

#### Input signal

#### Input and output versions

→ 🖺 14

#### External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Fluid temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases
- Various pressure transmitters and temperature measuring devices can be ordered from Endress +Hauser: see "Accessories" section → 🖺 85

It is recommended to read in external measured values to calculate the following measured variables for gases:

- Mass flow
- Corrected volume flow

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

#### Current input

#### Digital communication

The measured values can be written from the automation system to the measuring via:

- FOUNDATION Fieldbus
- PROFIBUS PA
- Modbus RS485

#### Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)
Current span	<ul><li>4 to 20 mA (active)</li><li>0/4 to 20 mA (passive)</li></ul>
Resolution	1 μΑ
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)
Maximum input voltage	≤ 30 V (passive)
Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	<ul><li>Pressure</li><li>Temperature</li><li>Density</li></ul>

#### Status input

Maximum input values	■ DC $-3$ to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Adjustable: 5 to 200 ms

Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>

## **Output**

#### Output and input variants

Depending on the option selected for output/input 1, different options are available for the other outputs and inputs. Only one option can be selected for each output/input 1 to 4. The table must be read vertically  $(\downarrow)$ .

Example: If the option **BA** (current output 4 to 20 mA HART) was selected for output/input 1, one of the options **A**, **B**, **D**, **E**, **F**, **H**, **I** or **J** is available for output 2 and one of the options **A**, **B**, **D**, **E**, **F**, **H**, **I** or **J** is available for output 3 and 4.

Order code for "Output; input 1" (020) →	Possible options						
Current output 4 to 20 mA HART	BA						
Current output 4 to 20 mA HART Ex i	<b>\</b>	CA					
FOUNDATION Fieldbus		4	SA				
FOUNDATION Fieldbus Ex i			<b>\</b>	TA			
PROFIBUS PA				<b>\</b>	GA		
PROFIBUS PA Ex i					<b>+</b>	НА	
Modbus RS485						<b>\</b>	MA
Order code for "Output; input 2" (021) →	<b>\</b>	4	4	<b>\</b>	4	<b>\</b>	<b>\</b>
Not assigned	A	Α	Α	Α	A	Α	А
Current output 0/4 to 20 mA	В		В		В		В
Current output 0/4 to 20 mA (Ex i)		С		С		С	
User configurable input/output 1)	D		D		D		D
Pulse/frequency/switch output	Е		Е		Е		Е
Double pulse output <sup>2)</sup>	F						F
Pulse/frequency/switch output (Ex i)		G		G		G	
Relay output	Н		Н		Н		Н
Current input 0/4 to 20 mA	I		I		I		I
Status input	J		J		J		J
Order code for "Output; input 3" (022), "Output; input 4" (023) $^{3)} \rightarrow$	<b>\</b>	4	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	4
Not assigned	A	Α	Α	Α	A	A	A
Current output 0/4 to 20 mA	В						В
Current output 0/4 to 20 mA (Ex i)		С					
User configurable input/output	D						D
Pulse/frequency/switch output	Е						Е
Double pulse output (slave) <sup>2) 4)</sup>	F						F
Pulse/frequency/switch output (Ex i)		G					
Relay output	Н						Н
Current input 0/4 to 20 mA	I						I
Status input	J						J

- 2) If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for selection for output/input 3 (022).
- 3) The order code for "Output; input 4" (023) is only available for the Proline 500 digital transmitter.
- 4) The double pulse output (F) option is not available for input/output 4.

#### Output signal

#### HART current output

Current output	4 to 20 mA HART
Current span	Can be set to: 4 to 20 mA (active/passive)
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	250 to 700 Ω
Resolution	0.38 μΑ
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### PROFIBUS PA

PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transfer	31.25 KBit/s
<b>Current consumption</b>	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 KBit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

#### Current output 0/4 to 20 mA

Current output	0/4 to 20 mA
Maximum output values	22.5 mA
Current span	Can be set to:
	<ul><li>4 to 20 mA (active)</li><li>0/4 to 20 mA (passive)</li></ul>
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)

Load	$0$ to $700~\Omega$
Resolution	0.38 μΑ
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

#### Pulse/frequency/switch output

	T
Function	Can be set to pulse, frequency or switch output
Version	Open collector
	Can be set to:  • Active
	■ Passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Adjustable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> </ul>
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Adjustable: end value frequency 2 to $10000Hz$ (f $_{max}$ = $12500Hz$ )
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
L	I .

Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value - Mass flow - Volume flow - Corrected volume flow - Density - Reference density - Temperature - Totalizer 1-3 ■ Flow direction monitoring ■ Status - Partially filled pipe detection - Low flow cut off  The range of options increases if the measuring device has one or more application packages.

### Double pulse output

Function	Double pulse
Version	Open collector  Can be set to:  Active Passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Adjustable: 0 to 1000 Hz
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Mass flow</li> <li>Volume flow</li> <li>Corrected volume flow</li> <li>Density</li> <li>Reference density</li> <li>Temperature</li> <li>The range of options increases if the measuring device has one or more application packages.</li> </ul>

## Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)

Endress+Hauser

Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	● Off     On     Diagnostic behavior     Limit value     Mass flow     Volume flow     Corrected volume flow     Density     Reference density     Temperature     Totalizer 1-3     Flow direction monitoring     Status     Partially filled pipe detection     Low flow cut off  The range of options increases if the measuring device has one or more application packages.

#### User configurable input/output

**One** specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

#### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### HART current output

Device diagnostics	Device condition can be read out via HART Command 48
--------------------	--

#### PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Error current FDE (Fault Disconnection Electronic)	0 mA

#### FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Error current FDE (Fault Disconnection Electronic)	0 mA

#### Modbus RS485

Failure mode	Choose from:
	NaN value instead of current value
	Last valid value

18

#### Current output 0/4 to 20 mA

#### 4 to 20 mA

Failure mode	Choose from:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA  Max. value: 22.5 mA  Freely definable value between: 3.59 to 22.5 mA  Actual value
	Last valid value

#### 0 to 20 mA

Failure mode	Choose from:
	■ Maximum alarm: 22 mA
	■ Freely definable value between: 0 to 20.5 mA

#### Pulse/frequency/switch output

Pulse output	Pulse output	
Failure mode	Choose from:  Actual value  No pulses	
Frequency output		
Failure mode	Choose from:  Actual value  O Hz  Defined value (f max 2 to 12 500 Hz)	
Switch output		
Failure mode	Choose from:  Current status  Open Closed	

#### Relay output

Failure mode	Choose from:
	<ul> <li>Current status</li> </ul>
	■ Open
	■ Closed

#### Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

#### Interface/protocol

- Via digital communication:
  - HART protocol
  - FOUNDATION Fieldbus
  - PROFIBUS PA
  - Modbus RS485
- Via service interface

Plain text display	With information on cause and remedial measures
--------------------	---



#### Web server

Plain text display	With information on cause and remedial measures
--------------------	---

#### Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes		
	The following information is displayed depending on the device version:  Supply voltage active  Data transmission active  Device alarm/error has occurred		

#### Ex connection data Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"	
		26 (+)	27 (-)
Option <b>BA</b>	Current output 4 to 20 mA HART	U <sub>nom</sub> = 30 V U <sub>max</sub> = 250 V	
Option <b>GA</b>	PROFIBUS PA	$U_{\text{nom}} = 32 \text{ V}$ $U_{\text{max}} = 250 \text{ V}$	
Option MA	Modbus RS485	U <sub>nom</sub> = 30 V U <sub>max</sub> = 250 V	
Option <b>SA</b>	FOUNDATION Fieldbus	U <sub>nom</sub> = 32 V U <sub>max</sub> = 250 V	

Order code for	Output type	Safety-related values		
"Output; input 2"; "Output; input 3" "Output; input 4"		Output; input 2	Output; input 3	Output; input 4 1)
		24 (+) 25 (-)	22 (+) 23 (-)	20 (+) 21 (-)
Option <b>B</b>	Current output 4 to 20 mA	$U_{\text{nom}} = 30 \text{ V}$ $U_{\text{max}} = 250 \text{ V}$		
Option <b>D</b>	User configurable input/output	U <sub>nom</sub> = 30 V U <sub>max</sub> = 250 V		
Option <b>E</b>	Pulse/frequency/switch output	U <sub>nom</sub> = 30 V U <sub>max</sub> = 250 V		
Option <b>F</b>	Double pulse output	$U_{\text{nom}} = 30 \text{ V}$ $U_{\text{max}} = 250 \text{ V}$		
Option <b>H</b>	Relay output	U <sub>nom</sub> = 30 V I <sub>nom</sub> = 100 mA DC/ U <sub>max</sub> = 250 V	500 mA AC	
Option I	Current input 4 to 20 mA	U <sub>nom</sub> = 30 V U <sub>max</sub> = 250 V		
Option <b>J</b>	Status input	$U_{\text{nom}} = 30 \text{ V}$ $U_{\text{max}} = 250 \text{ V}$		

1) The order code "Output; input 4" is only available for the Proline 500 - digital transmitter.

#### Intrinsically safe values

Order code for "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"		
		26 (+)	27 (-)	
Option <b>CA</b>	Current output 4 to 20 mA HART Ex i	$\begin{aligned} &U_{i} = 30 \text{ V} \\ &I_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0 \\ &C_{i} = 0 \end{aligned}$		
Option <b>HA</b>	PROFIBUS PA Ex i	$Ex ia ^{1)} \\ U_i = 30 V \\ l_i = 570 mA \\ P_i = 8.5 W \\ L_i = 10 \mu H \\ C_i = 5 nF$	Ex ic $^{2}$ ) $U_{i} = 32 \text{ V}$ $l_{i} = 570 \text{ mA}$ $P_{i} = 8.5 \text{ W}$ $L_{i} = 10  \mu\text{H}$ $C_{i} = 5 \text{ nF}$	
Option TA	FOUNDATION Fieldbus Ex i	$\begin{aligned} &\textbf{Ex ia}^{\ 1)} \\ &\textbf{U}_i = 30 \text{ V} \\ &\textbf{I}_i = 570 \text{ mA} \\ &\textbf{P}_i = 8.5 \text{ W} \\ &\textbf{L}_i = 10  \mu\text{H} \\ &\textbf{C}_i = 5 \text{ nF} \end{aligned}$	Ex ic $^{2}$ ) $U_{i} = 32 \text{ V}$ $l_{i} = 570 \text{ mA}$ $P_{i} = 8.5 \text{ W}$ $L_{i} = 10  \mu\text{H}$ $C_{i} = 5 \text{ nF}$	

- 1) Only available for the Zone 1, Class I, Division 1 version
- 2) Only available for the Zone 2, Class I, Division 2 version and only for the Proline 500 digital transmitter

Order code for	Output type	Intrinsically safe values					
"Output; input 2"; "Output; input 3"		Output; input 2		Output; input 2 Output; input 3		Output; input 4 1)	
"Output; input 4"		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option C	Current output 4 to 20 mA Ex i	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA				
Option <b>G</b>	Pulse/frequency/switch output Ex i	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA				

1) The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

The outputs are galvanically isolated from one another and from earth (PE).

#### Protocol-specific data

#### HART

Manufacturer ID	0x11
Device type ID	0x3B
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω

Dynamic variables	Read out the dynamic variables: HART command 3 The measured variables can be freely assigned to the dynamic variables.
	Measured variables for PV (primary dynamic variable)  Mass flow Volume flow Corrected volume flow Density Reference density Temperature
	Measured variables for SV, TV, QV (secondary, tertiary and quaternary dynamic variable)  Mass flow Volume flow Corrected volume flow Density Reference density Temperature Totalizer 1 Totalizer 2 Totalizer 3  The range of options increases if the measuring device has one or more application packages.  Heartbeat Technology Application Package
	Additional measured variables are available with the Heartbeat Technology application package: Oscillation amplitude 0  Heartbeat Technology Special Documentation
Device variables	Read out the device variables: HART command 9 The device variables are permanently assigned.  A maximum of 8 device variables can be transmitted:  0 = mass flow 1 = volume flow 2 = corrected volume flow 3 = density 4 = reference density 5 = temperature 6 = totalizer 1 7 = totalizer 2 8 = totalizer 3 13 = target mass flow 14 = carrier mass flow 15 = concentration

#### PROFIBUS PA

Manufacturer ID	0x11
Ident number	0x156D
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under:  www.endress.com www.profibus.org

22

#### Output values Analog input 1 to 8 (from measuring device to Mass flow automation system) Volume flow Corrected volume flow Carrier mass flow Target mass flow Density · Reference density Concentration Temperature Carrier pipe temperature ■ Electronic temperature Current input The range of options increases if the measuring device has one or more application packages. Heartbeat Technology Application Package Additional measured variables are available with the Heartbeat Technology application package: Oscillation frequency 0 • Frequency fluctuation 0 Oscillation amplitude 0 Oscillation damping 0 Oscillation damping fluctuation 0 • Exciter current 0 Heartbeat Technology Special Documentation Digital input 1 to 2 Empty pipe detection Low flow cut off Status verification Totalizer 1 to 3 Mass flow Volume flow Corrected volume flow Target mass flow Carrier mass flow Input values Analog output 1 to 3 (fixed assignment) (from automation system to Analog output 1: external pressure measuring device) Analog output 2: external temperature Analog output 3: external reference density Digital output 1 to 4: (fixed assignment) Digital output 1: switch positive zero return on/off • Digital output 2: switch zero point adjustment on/off Digital output 3: start verification • Digital output 4: relay output non-conductive/conductive Totalizer 1 to 3 Totalize Reset and hold Preset and hold Operating mode configuration: - Net flow total - Forward flow total - Reverse flow total Last valid value Supported functions Identification & Maintenance Simplest device identification on the part of the control system and nameplate PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur

Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Local display</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>
Compatibility with earlier model	If the device is replaced, the Promass 500 measuring device supports the compatibility of the cyclic data with earlier models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.
	Earlier models:  Promass 80 PROFIBUS PA  - ID No.: 1528 (hex)  - Extended GSD file: EH3x1528.gsd  - Standard GSD file: EH3_1528.gsd  Promass 83 PROFIBUS PA  - ID No.: 152A (hex)  - Extended GSD file: EH3x152A.gsd  - Standard GSD file: EH3_152A.gsd  Description of the function scope of compatibility:  Operating Instructions →   86.

#### FOUNDATION Fieldbus

Manufacturer ID	0x452B48
Ident number	0x103B
Device revision	1
DD revision	Information and files under:
CFF revision	<ul><li>www.endress.com</li><li>www.fieldbus.org</li></ul>
Interoperability Test Kit (ITK)	Version 6.1.2
ITK Test Campaign Number	Information:  www.endress.com www.fieldbus.org
Link Master capability (LAS)	Yes
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device
Node address	Factory setting: 247 (0xF7)
Supported functions	The following methods are supported:  Restart  ENP Restart  Diagnostic
Virtual Communication Relation	onships (VCRs)
Number of VCRs	44
Number of link objects in VFD	50
Permanent entries	1
Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43
Device Link Capabilities	
Slot time	4
Min. delay between PDU	8
Max. response delay	20

#### Transducer Blocks

Block	Contents	Output values
Setup Transducer Block (TRDSUP)	All parameters for standard commissioning.	No output values
Advanced Setup Transducer Block (TRDASUP)	All parameters for more accurate measurement configuration.	No output values
Display Transducer Block (TRDDISP)	Parameters for configuring the local display.	No output values
HistoROM Transducer Block (TRDHROM)	Parameters for using the HistoROM function.	No output values
Diagnostic Transducer Block (TRDDIAG)	Diagnostics information.	Process variables (AI Channel)  Temperature (7)  Volume flow (9)  Concentration (10)  Mass flow (11)  Corrected volume flow (13)  Density (14)  Reference density (15)  Carrier pipe temperature (51)  Carrier mass flow (57)  Target mass flow (58)  Electronic temperature (65)  Current input 1 (99)
Expert Configuration Transducer Block (TRDEXP)	Parameters that require the user to have indepth knowledge of the operation of the device in order to configure the parameters appropriately.	No output values
Expert Information Transducer Block (TRDEXPIN)	Parameters that provide information about the state of the device.	No output values
Service Sensor Transducer Block (TRDSRVS)	Parameters that can only be accessed by Endress +Hauser Service.	No output values
Service Information Transducer Block (TRDSRVIF)	Parameters that provide Endress+Hauser Service with information about the state of the device.	No output values
Total Inventory Counter Transducer Block (TRDTIC)	Parameters for configuring all the totalizers and the inventory counter.	Process variables (AI Channel) Totalizer 1 (16) Totalizer 2 (17) Totalizer 3 (18)
Heartbeat Technology Transducer Block (TRDHBT)	Parameters for the configuration and comprehensive information about the results of the verification.	No output values
Heartbeat Results 1 Transducer Block (TRDHBTR1)	Information about the results of the verification.	No output values
Heartbeat Results 2 Transducer Block (TRDHBTR2)	Information about the results of the verification.	No output values
Heartbeat Results 3 Transducer Block (TRDHBTR3)	Information about the results of the verification.	No output values
Heartbeat Results 4 Transducer Block (TRDHBTR4)	Information about the results of the verification.	No output values

#### Function blocks

Block	Number blocks	Execution times	Process variables (Channel)
Resource Block (RB)	1	This Block (extended functionality) contains all the data that uniquely identify the device; it is the equivalent of an electronic nameplate for the device.	-
Analog Input Block (AI)	8	7 ms	Process variables (AI Channel)  Temperature (7)  Volume flow (9)  Concentration (10)  Mass flow (11)  Corrected volume flow (13)  Density (14)  Reference density (15)  Totalizer 1 (16)  Totalizer 2 (17)  Totalizer 3 (18)  Carrier pipe temperature (51)  Carrier mass flow (57)  Target mass flow (58)  Electronic temperature (65)  Current input 1 (99)
Discrete Input Block (DI)	2	5 ms	<ul> <li>Switch output state (101)</li> <li>Low flow cut off (103)</li> <li>Empty pipe detection (104)</li> <li>Status verification (105)</li> </ul>
PID Block (PID)	1	6 ms	-
Multiple Analog Output Block (MAO)	1	5 ms	Channel_0 (121)  Value 1: External compensation variable, pressure  Value 2: External compensation variable, temperature  Value 3: External compensation variable, reference density  The compensation variable wariables must be transmitted to the device in the SI basic units.
Multiple Digital Output Block (MDO)	1	5 ms	Channel_DO (122)  Value 1: Reset totalizer 1  Value 2: Reset totalizer 2  Value 3: Reset totalizer 3  Value 4: Flow override  Value 5: Start heartbeat verification  Value 6: Status switch output  Value 7: Start zero point adjustment  Value 8: Not assigned
Integrator Block (IT)	1	6 ms	-

#### Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1					
Response times	<ul> <li>Direct data access: typically 25 to 50 ms</li> <li>Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>					
Device type	Slave					
Slave address range	1 to 247					
Broadcast address range	0					
Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>					
Broadcast messages	Supported by the following function codes:  O6: Write single registers  16: Write multiple registers  23: Read/write multiple registers					
Supported baud rate	<ul> <li>1200 BAUD</li> <li>2400 BAUD</li> <li>4800 BAUD</li> <li>9600 BAUD</li> <li>19200 BAUD</li> <li>38400 BAUD</li> <li>57600 BAUD</li> <li>115200 BAUD</li> </ul>					
Data transfer mode	• ASCII • RTU					
Data access	Each device parameter can be accessed via Modbus RS485.  For Modbus register information					
Compatibility with earlier model	If the device is replaced, the Promass 500 measuring device supports the compatibility of the Modbus registers for process variables and diagnostic information with the earlier Promass 83 model. It is not necessary to change the engineering parameters in the automation system.  □ Description of the function scope of compatibility:  Operating Instructions →  □ 86.					

## **Power supply**

#### Terminal assignment

Transmitter: supply voltage, input/outputs

#### HART

Supply	voltage	Input/output 1		Input/	output 2	Input/	output 3	Input/output 4	
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

#### FOUNDATION Fieldbus

Supply	voltage	Input/output 1		Input/	output 2	Input/	output 3	Input/output 4	
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

#### PROFIBUS PA

Supply	voltage	Input/output 1		Input/	output 2	Input/	output 3	Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

#### Modbus RS485

Supply	voltage	Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

#### Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 digital → 🖺 29
- Proline 500 → 🖺 30

#### Device plugs available



Device plugs may not be used in hazardous areas!

#### Device plugs are only available for the following device versions:

Order code for "Input; output 1"

- Option GA "PROFIBUS PA" → 🖺 28
- Option SA "FOUNDATION Fieldbus"  $\rightarrow$   $\stackrel{\triangle}{=}$  28

#### Order code for "Input; output 1", option GA "PROFIBUS PA"


Order code for	Cable entry	Cable entry
"Electrical connection"	2	3
L, N, P, U	Plug M12 × 1	-

#### Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry	Cable entry
"Electrical connection"	2	3
M, 3, 4, 5	7/8" plug	-

#### Pin assignment, device plug

#### PROFIBUS PA

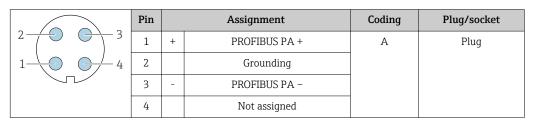

#### **FOUNDATION Fieldbus**

	Pin		Assignment	Coding	Plug/socket
2 / 6	1	+	Signal +	А	Plug
	4 2	-	Signal –		
	3		Grounding		
	4		Not assigned		

#### Supply voltage

Order code for "Power supply"	terminal voltage		Frequency range
Option <b>D</b>	DC 24 V	±20%	_
Option <b>E</b>	AC100 to 240 V	-15+10%	50/60 Hz
Option I	DC 24 V	±20%	_
Option i	AC100 to 240 V -15+10%		50/60 Hz

#### Power consumption

#### Transmitter

Max. 10 W (active power)

#### **Current consumption**

#### Transmitter


- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

#### Power supply failure

- Totalizers stop at the last value measured.
- Configuration is retained in the plug-in memory (HistoROM DAT).
- Error messages (incl. total operated hours) are stored.

#### **Electrical connection**

#### Connection of connecting cable: Proline 500 - digital

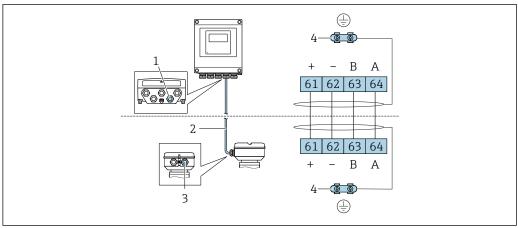

- Cable entry for cable on transmitter housing
- Connecting cable ISEM communication 2
- Cable entry for cable or connection of device plug on sensor connection housing
- Grounding via ground connection; on device plug versions grounding is through the plug itself.

Depending on the device version of the sensor connection housing, the connecting cable is connected via terminals or device plugs.

Sensor connection housing Order code for "Housing"	Connection on sensor connection housing via	Connection on transmitter housing via		
Option <b>A</b> : aluminum coated	Terminals	Terminals		
Option <b>B</b> : stainless	Terminals	terminals		
Option <b>C</b> ultra-compact, hygienic, stainless	Device plug	Terminals		

Pin assignment, device plug


Device plugs are only available for device version, order code for "Housing":

Option **C** ultra-compact, hygienic, stainless

For connection to sensor connection housing.


2	Pin	Color 1)		Assignment	
	1	Brown		Supply voltage	
3 0 0 1	2	White		ISEM communication	
	3	Blue	В	isew communication	
5	4	Black		Supply voltage	
4	5	-		-	
	Coding			Plug/socket	
	A			Plug	

1) Cable colors of connecting cable



#### Connection of the connecting cable: Proline 500

The connecting cable is connected via terminals.

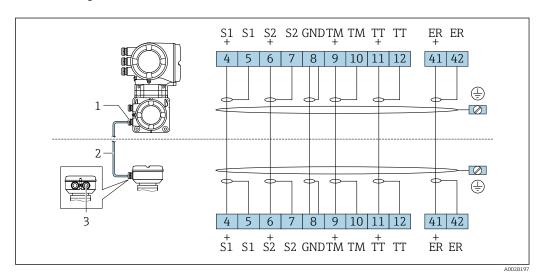


- 1 Cable entry for connecting cable on transmitter connection housing
- 2 Connecting cable
- 3 Cable entry for connecting cable on sensor connection housing

#### Connecting the transmitter

🚹 ■ Terminal assignment → 🖺 27


■ Device plug pin assignment → 🖺 28

#### Connection of the Proline 500 - digital transmitter

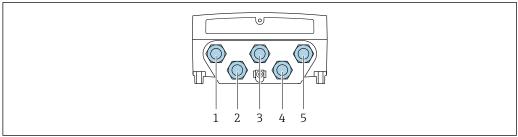

- Cable entry for supply voltage
- Cable entry for cable or connection of device plug for signal transmission
- Cable entry for cable or connection of device plug for signal transmission
- Cable entry for sensor transmitter connecting cable
- Cable entry for cable or connection of device plug for signal transmission, optional: connection of external WLAN antenna or service connector


#### Connection of the Proline 500 transmitter

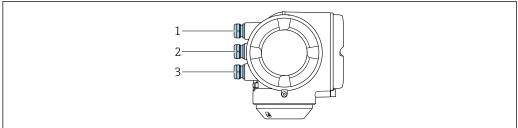


- Cable entry for supply voltage
- 2 Cable entry for input/output signal transmission
- Cable entry for input/output signal transmission; optional: connection of external WLAN antenna or service connector

#### **Connection examples**

#### Current output 4 to 20 mA HART

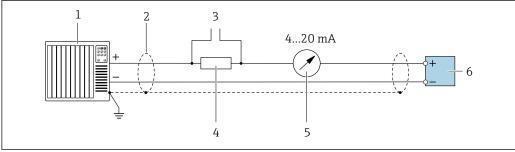


- **₽** 2 Connection example for 4 to 20 mA HART current output (active)
- Automation system with current input (e.g. PLC) 1
- Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable  $specifications \rightarrow \implies 38$
- Connection for HART operating devices  $\rightarrow \blacksquare 70$
- Resistor for HART communication ( $\geq 250~\Omega$ ): observe maximum load  $\rightarrow ~ riangleq 15$
- Transmitter

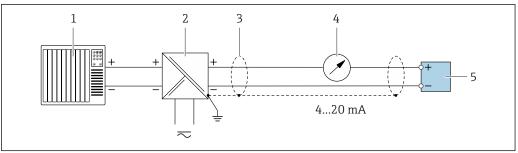

A002876

- 3 Connection example for 4 to 20 mA HART current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Power supply
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications → 38
- 5 Transmitter


#### HART input

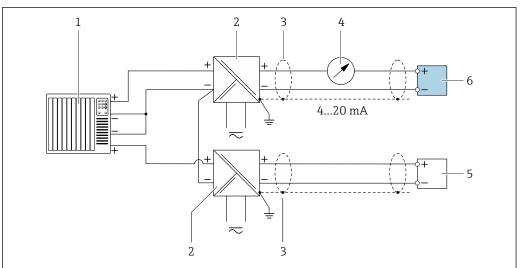

A0028763


- 4 Connection example for HART input with a common negative (passive)
- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load
- 5 Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements
- 6 Transmitter

#### PROFIBUS-PA

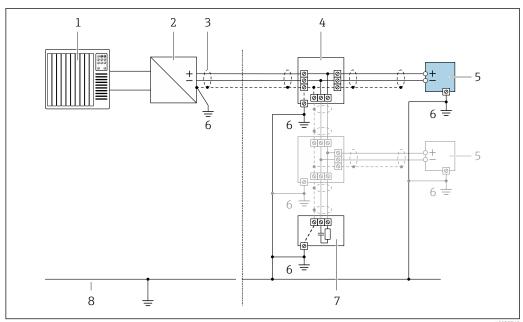

- **№** 5 Connection example for PROFIBUS-PA
- 1
- Control system (e.g. PLC) PROFIBUS PA segment coupler
- 2 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- T-box
- 5
- Measuring device Local grounding 6
- Bus terminator
- Potential matching line


#### FOUNDATION Fieldbus

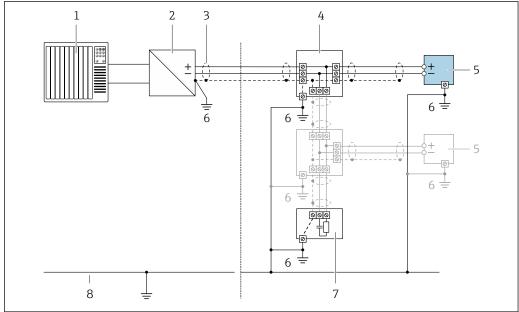

#### **₽** 6 Connection example for FOUNDATION Fieldbus

- 1
- Control system (e.g. PLC) Power Conditioner (FOUNDATION Fieldbus)
- Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable 3
- T-box 4
- 5
- Measuring device Local grounding 6
- Bus terminator
- Potential matching line


#### Modbus RS485

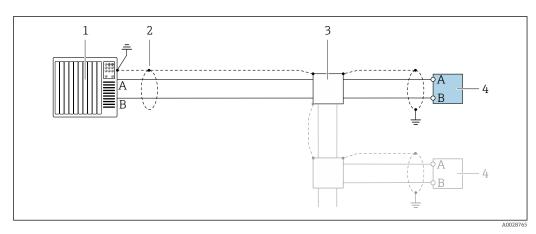

- **₽** 7 Connection example for Modbus RS485, non-hazardous area and Zone 2/Div. 2
- Control system (e.g. PLC)
- Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- Distribution box
- Transmitter


34

#### Current output 4-20 mA

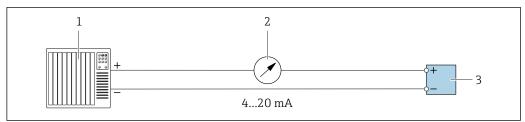

A002875


- 8 Connection example for 4-20 mA current output (active)
- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

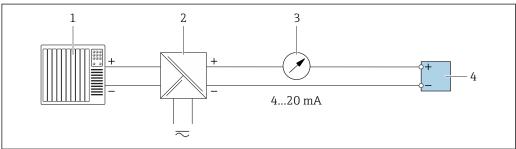

A0028759


- 9 Connection example for 4-20 mA current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter

#### Pulse/frequency output

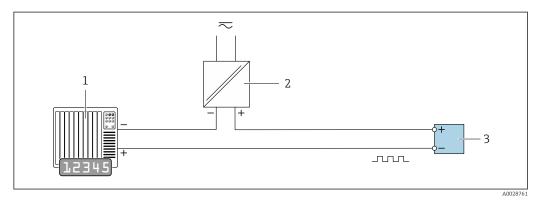

- 10 Connection example for pulse/frequency output (passive)
- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 🖺 16


#### Switch output

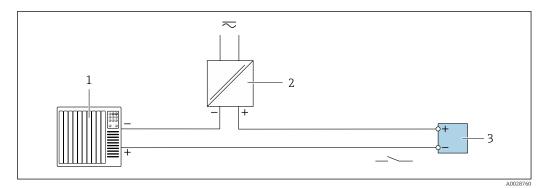

■ 11 Connection example for switch output (passive)


- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply
- *3* Transmitter: Observe input values → 🖺 16

#### Double pulse output

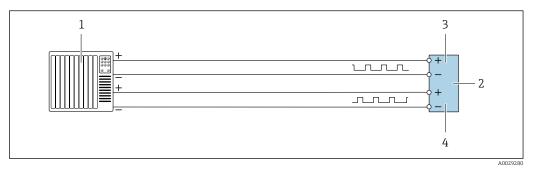

■ 12 Connection example for double pulse output (active)


- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: Observe input values  $\rightarrow = 17$
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

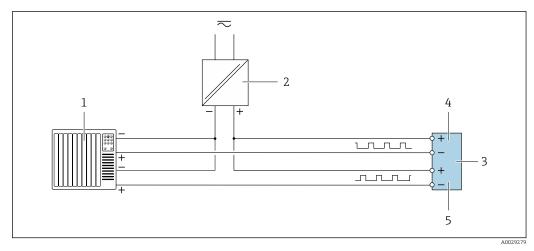

■ 13 Connection example for double pulse output (passive)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Power supply
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted


# Relay output

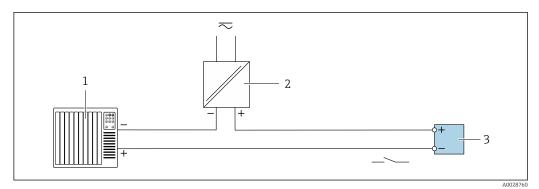

■ 14 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values → 🖺 17


# Current input

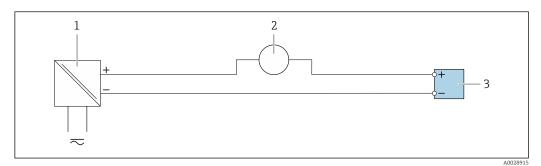

■ 15 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 External measuring device (for reading in pressure or temperature, for instance)
- 3 Transmitter: Observe input values

#### Status input

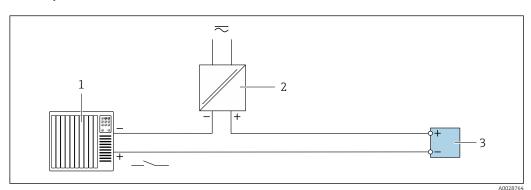

 $\blacksquare$  16 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values

# Potential equalization

# Requirements

No special measures for potential equalization are required.

# **Terminals**

#### Transmitter

Spring terminals for conductor cross-section 0.2 to 2.5  $\text{mm}^2$  (24 to 12 AWG)

#### Cable entries

- Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
  - NPT 1/2"
  - G ½"
  - M20
- Device plug for connecting cable: M12
   A device plug is always used for the device version with the order code for "Sensor connection housing", option C "Ultra-compact, hygienic, stainless".

#### Cable specification

#### Permitted temperature range

Minimum requirement: cable temperature range ≥ ambient temperature +20 K

#### Power supply cable

Standard installation cable is sufficient.

#### Protective ground cable

Cable: 2.1 mm<sup>2</sup> (14 AWG)

The grounding impedance must be less than 1  $\Omega$ .

#### Signal cable

Current output 4 to 20 mA HART

A shielded cable is recommended. Observe grounding concept of the plant.

#### PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended.



For further information on planning and installing PROFIBUS PA networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

#### FOUNDATION Fieldbus

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

#### Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A			
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz			
Cable capacitance	< 30 pF/m			
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)			
Cable type	Twisted pairs			
Loop resistance	≤110 Ω/km			
Signal damping	Max. 9 dB over the entire length of the cable cross-section			
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.			

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

*Pulse/frequency/switch output* 

Standard installation cable is sufficient.

Double pulse output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA

Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

# Connecting cable for sensor - transmitter: Proline 500 - digital

Non-hazardous area, Ex Zone 2, Class I, Division 2

Standard cable

A standard cable can be used as the connecting cable.

Standard cable	4 cores (2 pairs); twisted pair with common shield		
Shielding	Tin-plated copper-braid, optical cover $\geq$ 85 %		
Loop resistance	Power supply line (+, –): maximum 10 $\Omega$		
Cable length Maximum 300 m (1000 ft), see the following table.			

Cross-section	Cable length
0.34 mm <sup>2</sup> (AWG 22)	80 m (270 ft)
0.50 mm <sup>2</sup> (AWG 20)	120 m (400 ft)
0.75 mm <sup>2</sup> (AWG 18)	180 m (600 ft)
1.00 mm <sup>2</sup> (AWG 17)	240 m (800 ft)
1.50 mm <sup>2</sup> (AWG 15)	300 m (1000 ft)

#### Optionally available connecting cable

Standard cable	$2\times2\times0.34~\text{mm}^2$ (AWG 22) PVC cable with common shield (2 pairs, twisted pair)			
Flame resistance	ccording to DIN EN 60332-1-2			
Oil-resistance	According to DIN EN 60811-2-1			
Shielding	Tin-plated copper-braid, optical cover $\geq$ 85 %			
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when calcan move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)			
Available cable length	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)			

Hazardous area, Ex Zone 1, Class I, Division 1

# Standard cable

A standard cable can be used as the connecting cable.

Standard cable	4, 6, 8 cores (2, 3, 4 pairs); twisted pair with common shield			
Shielding	Fin-plated copper-braid, optical cover ≥ 85 %			
Capacitance C	Maximum 730 nF IIC, maximum 4.2 μF IIB			
Inductance L	Maximum 26 μH IIC, maximum 104 μH IIB			
Inductance/resistance ratio (L/R)	Maximum 8.9 $\mu H/\Omega$ IIC, maximum 35.6 $\mu H/\Omega$ IIB (e.g. in accordance with IEC 60079-25)			
Loop resistance	Power supply line (+, $-$ ): maximum 5 $\Omega$			
Cable length	Maximum 150 m (500 ft), see the following table.			

Cross-section	Cable length	Assembly
2 x 2 x 0.50 mm <sup>2</sup> (AWG 22)	50 m (165 ft)	2 x 2 x 0.50 mm <sup>2</sup> (AWG 22)
		+ - A B B
		$+, -= 0.5 \text{ mm}^2$ $A, B = 0.5 \text{ mm}^2$
3 x 2 x 0.50 mm <sup>2</sup> (AWG 22)	100 m (330 ft)	3 x 2 x 0.50 mm <sup>2</sup> (AWG 22)
		+ - A B
		■ +, - = 1.0 mm <sup>2</sup> ■ A, B = 0.5 mm <sup>2</sup>
4 x 2 x 0.50 mm <sup>2</sup> (AWG 22)	150 m (500 ft)	4 x 2 x 0.50 mm <sup>2</sup> (AWG 22)
		+ A B
		■ +, - = 1.5 mm <sup>2</sup> ■ A, B = 0.5 mm <sup>2</sup>

Optionally available connecting cable

Connecting cable for	Ex Zone 1, Class I, Division 1, IIC, IIB		
Standard cable	$2 \times 2 \times 0.5 \text{ mm}^2$ (AWG 20) PVC cable with common shield (2 pairs, twisted pair)		

Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper-braid, optical cover $\geq$ 85 %
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)
Available cable length	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)

### Connecting cable for sensor - Proline 500 transmitter

Standard cable	$6 \times 0.38 \ \text{mm}^2$ PVC cable with common shield and individual shielded cores
Conductor resistance	≤50 Ω/km (0.015 Ω/ft)
Capacitance: core/shield	<420 pF/m (128 pF/ft)
Cable length (max.)	20 m (65 ft)
Cable lengths (available for order)	5 m (15 ft), 10 m (32 ft), 20 m (65 ft)
Operating temperature	max. 105 °C (221 °F)

Operation in zones of severe electrical interference

Grounding is by means of the ground terminal provided for the purpose inside the connection housing. The stripped and twisted lengths of cable shield to the ground terminal must be as short as possible.

# Performance characteristics

# reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at 2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.



To obtain measured errors, use the *Applicator* sizing tool  $\rightarrow \blacksquare 85$ 

#### Maximum measured error

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

#### Base accuracy



Design fundamentals → 🖺 44

Mass flow and volume flow (liquids)

±0.10 % o.r.

Mass flow (gases)

±0.50 % o.r. (tantalum)

# Density (liquids)

Under reference operating conditions	Standard density calibration <sup>1)</sup>	Wide-range Density specification <sup>2) 3)</sup>	
[g/cm³]	[g/cm³]	[g/cm³]	
±0.0005	±0.02	±0.002	

- 1)
- Valid over the entire temperature and density range Valid range for special density calibration: 0 to 2 g/cm³, +10 to +80 °C (+50 to +176 °F) 2)
- Order code for "Application package", option EF "Special density" 3)

#### *Temperature*

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

# Zero point stability

DN		Zero point stability		
[mm]	[mm] [in]		[lb/min]	
8	3/8	0.40	0.015	
15	1/2	0.65 0.024		
25	1	1.80 0.066		
40	1½	9.00	0.331	
50	2	14.00	0.514	

#### Flow values

Flow values as turndown parameter depending on nominal diameter.

# SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6500	650	325	130	65	13
25	18 000	1800	900	360	180	36
40	45 000	4500	2 250	900	450	90
50	70 000	7 000	3 500	1400	700	140

# US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08 13.23		6.615	1.323
1½	1654	165.4	82.70	33.08	16.54	3.308
2	2573	257.3	128.7	51.46	25.73	5.146

#### Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy ±5 μA

Pulse/frequency output

o.r. = of reading

Accuracy Max. ±50 ppm o.r. (across the entire ambient temperature range)

#### Repeatability

o.r. = of reading;  $1 \text{ g/cm}^3 = 1 \text{ kg/l}$ ; T = medium temperature

#### Base repeatability

Mass flow and volume flow (liquids)

±0.05 % o.r.

#### Mass flow (gases)

±0.25 % o.r. (tantalum)



Design fundamentals → 🖺 44

#### Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$ 

#### **Temperature**

 $\pm 0.25 \,^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.45 \,^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \,^{\circ}\text{F})$ 

### Response time

The response time depends on the configuration (damping).

# Influence of ambient temperature

#### **Current output**

o.r. = of reading

Temperature coefficient	Typically 1 μA/°C
-------------------------	-------------------

#### Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.

# Influence of medium temperature

# Mass flow and volume flow


When there is a difference between the temperature for zero point adjustment and the process temperature, the typical measured error of the sensor is  $\pm 0.0002$  % of the full scale value/°C ( $\pm 0.0001$  % of the full scale value/°F).

#### Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is  $\pm 0.0001$  g/cm³ /°C ( $\pm 0.00005$  g/cm³ /°F). Field density calibration is possible.

# Wide-range density specification (special density calibration)

If the process temperature is outside the valid range ( $\rightarrow \triangleq 41$ ) the measured error is  $\pm 0.0001~g/cm^3$  /°C ( $\pm 0.00005~g/cm^3$  /°F)

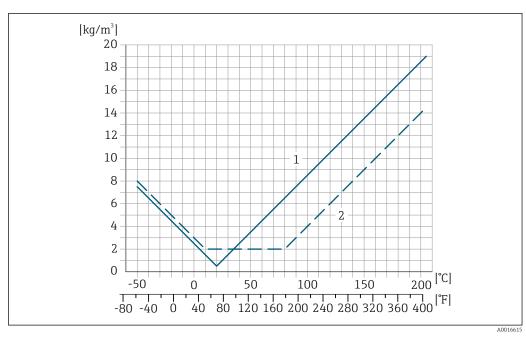

- Field density calibration, for example at +20  $^{\circ}$ C (+68  $^{\circ}$ F)
- 2 Special density calibration

#### Temperature

 $\pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.005 \cdot (\text{T} - 32) \,^{\circ}\text{F})$ 

# Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading

D	N	Promass H zirconium	702/R 60702	Promass H ta	ass H tantalum 2.5W	
[mm]	[in]	[% o.r./bar]	[% o.r./psi]	[% o.r./bar]	[% o.r./psi]	
8	3/8	-0.017	-0.0012	-0.007	-0.0005	
15	1/2	-0.021	-0.0014	-0.005	-0.0003	
25	1	-0.013	-0.0009	-0.015	-0.0010	
40	11/2	-0.018	-0.0012	-0.012	-0.0008	
50	2	-0.015	-0.0010	-0.011	-0.0008	

# Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


 ${\it Calculation\ of\ the\ maximum\ measured\ error\ as\ a\ function\ of\ the\ flow\ rate}$ 

Flow rate	Maximum measured error in % o.r.
≥ ZeroPoint · 100	± BaseAccu
A0021332	A002133
< ZeroPoint BaseAccu · 100	± ZeroPoint MeasValue · 100
A0021333	A0021334

Calculation of the maximum repeatability as a function of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	± BaseRepeat
A0021335	10021710
$<\frac{\frac{1}{2} \cdot \text{ZeroPoint}}{\text{BaseRepeat}} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337

#### Example for max. measured error

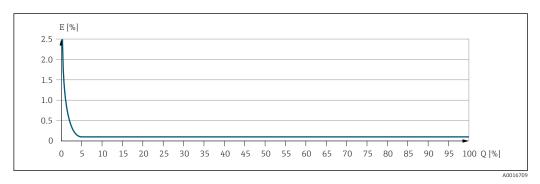


- E Error: Maximum measured error as % o.r. (example)
- Q Flow rate as %

# Installation

No special measures such as supports etc. are necessary. External forces are absorbed by the construction of the device.

# Mounting location

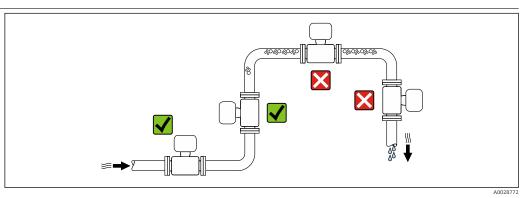


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

#### Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

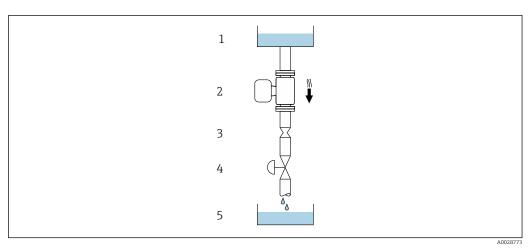

Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- *3 Orifice plate, pipe restriction*
- 4 Valve
- 5 Batching tank

D	N	Ø orifice plate, pipe restriction		
[mm]	[in]	[mm]	[in]	
8	3/8	6	0.24	
15	1/2	10	0.40	
25	1	14	0.55	
40	1½	22	0.87	
50	2	28	1.10	


#### Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientatio	n	Recommendation
A	Vertical orientation	A0015591	
В	Horizontal orientation, transmitter head up	A0015589	✓✓ <sup>1)</sup> Exceptions: → 🖸 18, 🖺 47
С	Horizontal orientation, transmitter head down	A0015590	Exceptions: $\rightarrow \blacksquare 18, \stackrel{\triangle}{\blacksquare} 47$
D	Horizontal orientation, transmitter head at side	A0015592	

- 1) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- 2) Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

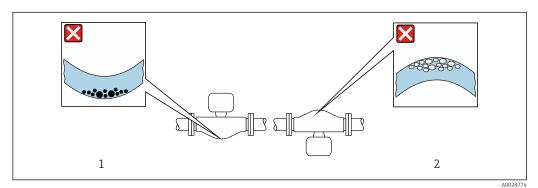

 $\blacksquare$  18 Orientation of sensor with curved measuring tube


- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

Inlet and outlet runs

# Mounting the transmitter housing


# Proline 500 - digital transmitter

Post mounting

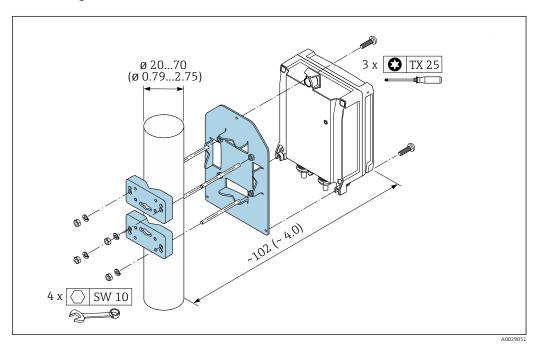

■ 19 Engineering unit mm (in)

#### Wall mounting

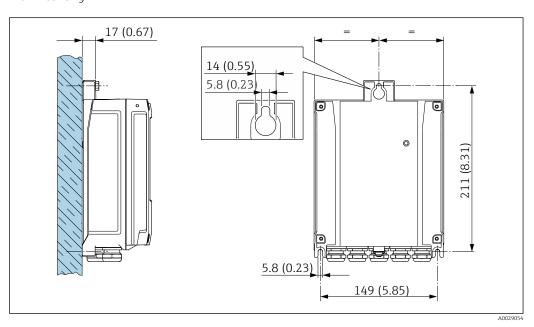

20 Engineering unit mm (in)

#### Proline 500 transmitter


Post mounting

# **▲** WARNING

Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.


They are unstable if they are not mounted on a secure, fixed post.

▶ Only mount the transmitter on a secure, fixed post on a stable surface.

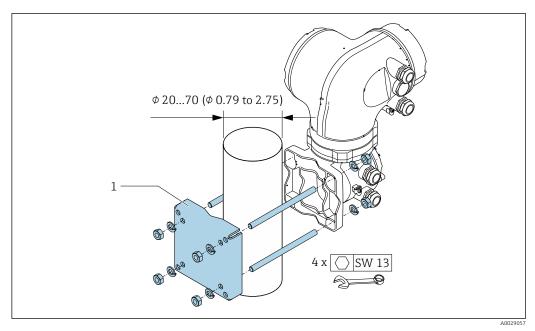

■ 21 Engineering unit mm (in)

#### Wall mounting

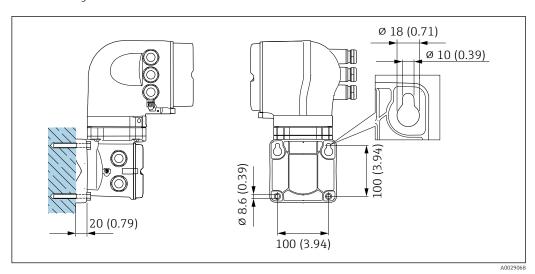

**■** 22 Engineering unit mm (in)

# Special mounting instructions

### Zero point adjustment

Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

# **Environment**

Ambient temperature range	Measuring device	Non-Ex	-40 to +60 °C (-40 to +140 °F)	
		Ex ec, NI version	-40 to +60 °C (-40 to +140 °F)	

Ex ia, IS version	<ul> <li>-40 to +60 °C (-40 to +140 °F)</li> <li>Order code for "Test, certificate", option JP -50 to +60 °C (-58 to +140 °F)</li> <li>Order code for "Test, certificate", option JQ -60 to +60 °C (-76 to +140 °F) (sensor) -50 to +60 °C (-58 to +140 °F) (transmitter)</li> </ul>
Readability of the local display	-20 to $+60$ °C ( $-4$ to $+140$ °F) The readability of the display may be impaired at temperatures outside the temperature range.

► If operating outdoors:

Avoid direct sunlight, particularly in warm climatic regions.



Storage temperature	−50 to +80 °C (−58 to +176 °F)
Climate class	DIN EN 60068-2-38 (test Z/AD)
Degree of protection	Transmitter  ■ As standard: IP66/67, type 4X enclosure  ■ With the order code for "Sensor options", option <b>CM</b> : IP69K can also be ordered  ■ When housing is open: IP20, type 1 enclosure  ■ Display module: IP20, type 1 enclosure
	Sensor As standard: IP66/67, type 4X enclosure
	External WLAN antenna IP67
Vibration resistance	<ul> <li>■ Vibration, sinusoidal according to IEC 60068-2-6</li> <li>— 2 to 8.4 Hz, 3.5 mm peak</li> <li>— 8.4 to 2 000 Hz, 1 g peak</li> <li>■ Vibration broad-band random, according to IEC 60068-2-64</li> <li>— 10 to 200 Hz, 0.003 g²/Hz</li> <li>— 200 to 2 000 Hz, 0.001 g²/Hz</li> <li>— Total: 1.54 g rms</li> </ul>
Shock resistance	Shock, half-sine according to IEC 60068-2-27 6 ms 30 g
Impact resistance	Rough handling shocks according to IEC 60068-2-31
Interior cleaning	<ul> <li>Cleaning in place (CIP)</li> <li>Sterilization in place (SIP)</li> </ul>
	Options Oil- and grease-free version for wetted parts, without inspection certificate

# compatibility (EMC)

Electromagnetic

As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)




 $\hfill \hfill \hfill$ 

Order code for "Service", option HA

# **Process**

# Medium temperature range

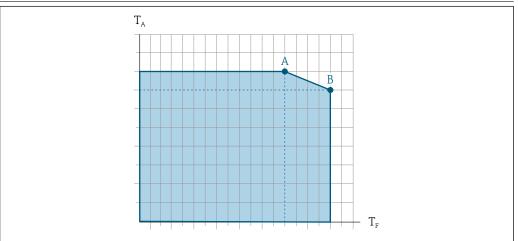

A003112

- *T*<sub>A</sub> Ambient temperature
- *T<sub>F</sub>* Medium temperature
- A Maximum permitted medium temperature at  $T_{A max} = 60 \,^{\circ}\text{C} (140 \,^{\circ}\text{F})$ ; higher medium temperatures require a reduction in the ambient temperature  $T_F$  (derating)
- B Maximum permitted ambient temperature at the maximum specified medium temperature of the sensor

Sensor	Noninsulated					Insulated			
		A	В		A		В		
	T <sub>A</sub>	$T_{\mathrm{F}}$	T <sub>A</sub>	T <sub>F</sub>	T <sub>A</sub>	$T_{\mathrm{F}}$	T <sub>A</sub>	$T_{\mathrm{F}}$	
Promass H 500 – digital 1)	60 °C (140 °F)	150 °C (302 °F)	-	-	60 °C (140 °F)	150 °C (302 °F)	_	_	
Promass H 500 – digital <sup>2)</sup>	60 °C (140 °F)	205 °C (401 °F)	_	-	60 °C (140 °F)	150 ℃ (302 ℉)	55 ℃ (131 ℉)	205 °C (401 °F)	

- 1) Tantalum (order code "Meas. Tube Mat.", option EA)
- 2) Zirconium 702 (order code "Meas. Tube Mat.", option DA)

#### Seals

No internal seals


#### Density

0 to  $5000 \text{ kg/m}^3$  (0 to 312 lb/cf)

# Pressure-temperature ratings

The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection.


### Flange connection according to EN 1092-1 (DIN 2501)

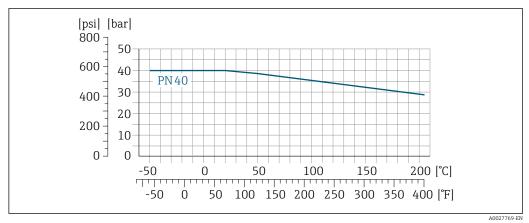

■ 23 With flange material 1.4301 (304); wetted parts: zirconium 702, tantalum

The material load curves for the temperature range +150 to +205 °C (+302 to +401 °F) apply only to the order code for "Measuring tube material", option TJ


# Flange connection according to ASME B16.5

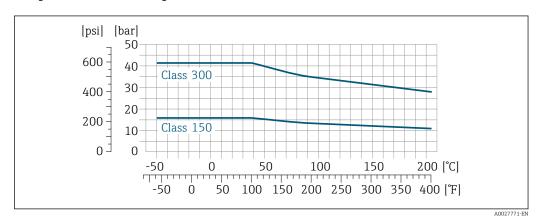

■ 24 With flange material 1.4301 (304); wetted parts: zirconium 702, tantalum

The material load curves for the temperature range +150 to +205 °C (+302 to +401 °F) apply only to the order code for "Measuring tube material", option TJ

#### Flange connection according to JIS B2220

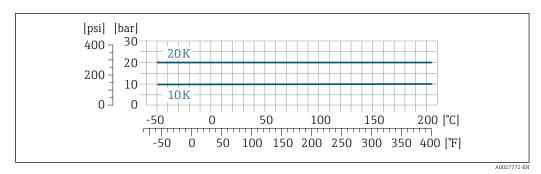

With flange material 1.4301 (304); wetted parts: zirconium 702, tantalum

The material load curves for the temperature range +150 to +205 °C (+302 to +401 °F) apply only to the order code for "Measuring tube material", option TJ

# Secondary containment pressure rating

The sensor housing is filled with dry inert gas and protects the electronics and mechanics inside.

The following secondary containment pressure rating is only valid for a fully welded sensor housing and/or a device equipped with closed purge connections (never opened/as delivered).

D	N	pressur	containment e rating a a safety factor 4)	Secondary contains	nent burst pressure
[mm]	[in]	[bar]	[psi]	[bar]	[psi]
8	3/8	25	362	170	2 465
15	1/2	25	362	160	2320
25	1	25	362	130	1885

D	N	pressur	containment e rating a a safety factor 4)	Secondary containment burst pressure		
[mm]	[in]	[bar]	[psi]	[bar] [psi]		
40	1½	16	232	85	1232	
50	2	16	232	85 1232		

If there is a risk of the measuring tube breaking due to process characteristics, e.g. in the case of corrosive fluids, we recommend the use of sensors whose secondary containment is equipped with special "pressure monitoring connections" (order code for "Sensor option", option CH "purge connection").

With the help of these connections, the fluid collected in the secondary containment can be bled off in the event of tube failure. This is especially important in high-pressure gas applications. These connections can also be used for gas purging (gas detection).

Do not open the purge connections unless the containment can be filled immediately with a dry, inert gas. Use only low gauge pressure to purge. Maximum pressure: 5 bar (72.5 psi).

If a device fitted with purge connections is connected to the purge system, the maximum nominal pressure is determined by the purge system itself or by the device, depending on which component has the lower nominal pressure.

For information on the dimensions: see the "Mechanical construction -> Accessories" section

#### Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure



For an overview of the full scale values for the measuring range, see the "Measuring range" section

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
  - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).

#### Pressure loss






#### System pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas. This is prevented by means of a sufficiently high system pressure.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)



#### Thermal insulation

In the case of some fluids, it is important that the heat radiated from the sensor to the transmitter is kept to a minimum. A wide range of materials can be used for the required insulation.

#### NOTICE


# Danger of overheating with insulation

Ensure that the temperature at the lower end of the sensor housing does not exceed 80 °C (176 °F)

#### **NOTICE**


The insulation can also be thicker than the maximum recommended insulation thickness. Prerequisite:

- ► Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- ► Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.

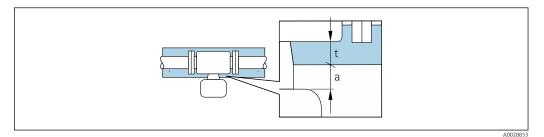

- Minimum distance to insulation
- t maximum Insulation thickness

The minimum distance a between the sensor connection housing and the insulation is 10 mm (0.39 in). This is to ensure that the sensor connection housing remains completely exposed.

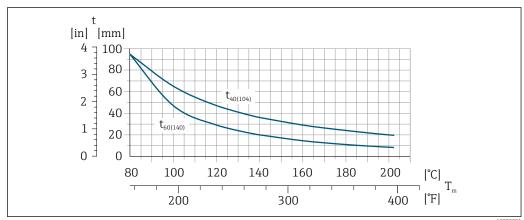

A002992

Insulation thickness

 $T_{m}$  Medium temperature

 $t40_{(104)}$  Maximum recommended insulation thickness at an ambient temperature of  $T_a = 40$  °C (104 °F)


t60 $_{(140)}$  Maximum recommended insulation thickness at an ambient temperature of  $T_a = 60 \,^{\circ}\text{C}$  (140  $^{\circ}\text{F}$ )

#### Heating

Some fluids require suitable measures to avoid loss of heat at the sensor.

#### Heating options

- Electrical heating, e.g. with electric band heaters
- ullet Via pipes carrying hot water or steam
- Via heating jackets



#### NOTICE

### Danger of overheating when heating

- ► Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- Ensure that convection takes place on a sufficiently large scale at the transmitter neck.
- ► Ensure that a sufficiently large area of the housing support remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.


Vibrations

The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

# Mechanical construction

#### Dimensions in SI units

Housing of Proline 500 – digital transmitter, non-Ex, Zone 2 and Div. 2  $\,$ 

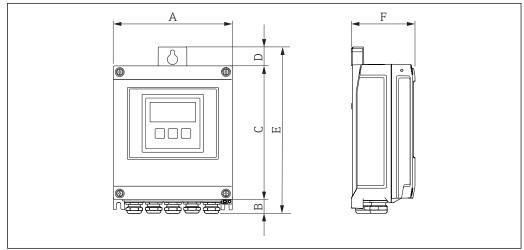

A002052


Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Digital, sensor"

A	B	C	D	E	F
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
167	21	187	24	232	

 $\label{lem:code} \textit{Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Digital, sensor" \\$ 

A	B	C	D	E	F
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
177	22	197	17	234	90

# Housing of Proline 500 transmitter, Zone 1/2 and Div. 1/2

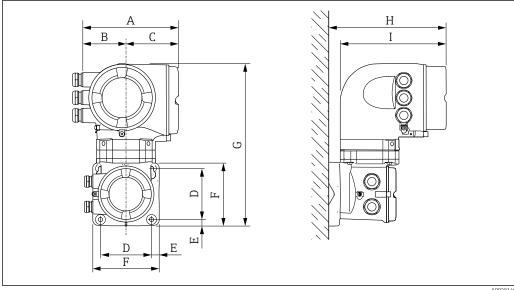

A002914


Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Analog, transmitter"

A	B	C	D	E	F	G	H	I
[mm]								
188	85	103	100	15	130	318	239	

 $\label{lem:code} \textit{Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Analog, transmitter"$ 

A	B	C	D	E	F	G	H	I
[mm]								
188	85	103	100	15	130	295	239	

#### Sensor connection housing

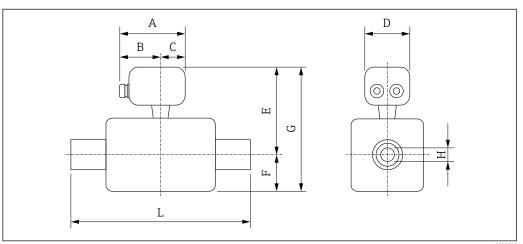

A0029795

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	В	С	D	Е	F	G	Н	L
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	147.5	93.5	54	136	261	108	369	5.35	2)
15	147.5	93.5	54	136	261	108	369	8.30	2)
25	147.5	93.5	54	136	261	121	382	12.0	2)
40	147.5	93.5	54	136	285	173	458	17.6	2)
50	147.5	93.5	54	136	296	241	537	26.0	2)

- 1) Depending on the cable gland used: values up to  $\pm$  30 mm
- 2) Dependent on the respective process connection

Order code for "Sensor connection housing", option B "Stainless, hygienic"

	•					. , ,			
DN	A 1)	B 1)	С	D	E	F	G	Н	L
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	137	78	59	133.5	257	108	365	5.35	2)
15	137	78	59	133.5	257	108	365	8.30	2)
25	137	78	59	133.5	257	121	378	12.0	2)

DN	A 1)	B 1)	С	D	E	F	G	Н	L
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
40	137	78	59	133.5	281	173	454	17.6	2)
50	137	78	59	133.5	292	241	533	26.0	2)

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) Dependent on the respective process connection

Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"

DN	1)A	1)B	С	D	E	F <sup>2)3)</sup>	G <sup>2)3)</sup>	Н	L
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	124	68	56	111.5	75	180	255	5.35	4)
15	124	68	56	111.5	75	180	255	8.30	4)
25	124	68	56	111.5	75	180	255	12.0	4)
40	124	68	56	111.5	105	184.5	289.5	17.6	4)
50	124	68	56	111.5	141	194.5	335.5	26.0	4)
80	124	68	56	111.5	200	214.5	414.5	40.5	4)
100	124	68	56	111.5	254	233	487	51.2	4)
150	124	68	56	111.5	378	254	632	68.9	4)
250	124	68	56	111.5	548	297.5	845.5	102.3	4)

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) If using an extension neck for the extended temperature range, order code for "Sensor option", option CG and order code for "Measuring tube material", option SD, SE, SF, TH, LA: values +70 mm
- 3) If using an extension neck for the high-temperature range, order code for "Sensor option", option CG and order code for "Measuring tube material", option TT, TU: values +104 mm
- 4) Dependent on the respective process connection


Order code for "Sensor connection housing", option L "Cast, stainless"

DN	A 1)	В	С	D	Е	F	G	Н	L
[mm]									
8	224	165	59	136	284	108	392	5.35	2)
15	224	165	59	136	284	108	392	8.30	2)
25	224	165	59	136	284	121	405	12.0	2)
40	224	165	59	136	308	173	481	17.6	2)
50	224	165	59	136	319	241	560	26.0	2)

- 1) Depending on the cable gland used: values up to  $\pm$  30 mm
- 2) Dependent on the respective process connection

# Flange connections

Fixed flange EN 1092-1, ASME B16.5, JIS B2220

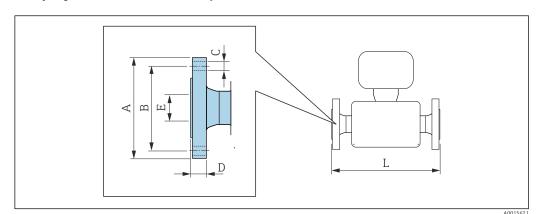

Length tolerance for dimension L in mm: +1.5 / -2.0

Flange according to EN 1092-1 (DIN 2501): PN 40 1.4404 (316/316L) Order code for "Process connection", option D2W											
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]					
8 <sup>1)</sup>	95	65	4 × Ø14	20	17.3	336					
15	95	65	4 × Ø14	20	17.3	440					
25	115	85	4 × Ø14	19.0	28.5	580					
40	150	110	4 × Ø18	21.5	43.1	794					
50	165	125	4 × Ø18	23.5	54.5	1071					
Surface roughn	iess (flange): EN	1092-1 Form F	31 (DIN 2526 Form	C), Ra 3.2 to 12	2.5 µm						

1) DN 8 with DN 15 flanges as standard

Flange according to ASME B16.5: CI 150 1.4404 (316/316L) Order code for "Process connection", option AAW										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]				
8 1)	90	60.3	4 × Ø15.7	12.8	15.7	336				
15	90	60.3	4 × Ø15.7	12.8	15.7	440				
25	110	79.4	4 × Ø15.7	15.1	26.7	580				
40	125	98.4	4 × Ø15.7	17.5	40.9	794				
50	150	120.7	4 × Ø19.1	23.6	52.6	1071				
Surface rough	ness (flange): R	a 3.2 to 6.3 μm	1							

1) DN 8 with DN 15 flanges as standard

1.4404 (316/	ling to ASME E 316L) "Process connec		BW			
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 <sup>1)</sup>	95	66.7	4 × Ø15.7	14.2	15.7	336
15	95	66.7	4 × Ø15.7	14.2	15.7	440
25	125	88.9	4 × Ø19.1	17.5	26.7	580
40	155	114.3	4 × Ø22.3	20.6	40.9	794
50	165	127.0	8 × Ø19.1	23.6	52.6	1071
Surface rough	ness (flange): R	la 3.2 to 6.3 µm	1			


1) DN 8 with DN 15 flanges as standard

Flange JIS B22 1.4404 (316/3 Order code for	316L)	tion", option <b>NE</b> V	W			
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 <sup>1)</sup>	95	70	4 × Ø15	14	15	336
15	95	70	4 × Ø15	14	15	440
25	125	90	4 × Ø19	16	25	580
40	140	105	4 × Ø19	18	40	794
50	165	120	8 × Ø19	22	50	1071
Surface roughr	ness (flange): Ra	3.2 to 6.3 µm				

1) DN 8 with DN 15 flanges as standard

#### Accessories


Purge connections / secondary containment monitoring

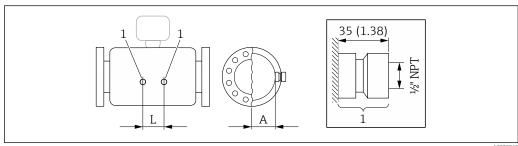

Connection nipple for purge connections/pressure vessel monitoring: order code for "Sensor options", option CH "Purge connection"

DN	A	L
[mm]	[mm]	[mm]
8	47	110
15	47	204
25	47	348
40	67	526
50	84.5	763


#### External WLAN antenna

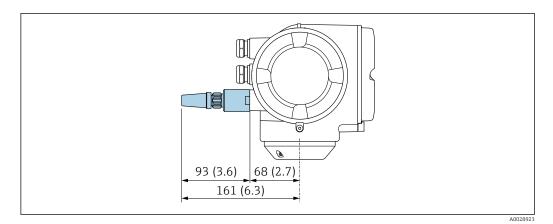

**■** 26 Engineering unit mm (in)

#### Dimensions in US units

# Housing of Proline 500 – digital transmitter, non-Ex, Zone 2 and Div. 2 $\,$

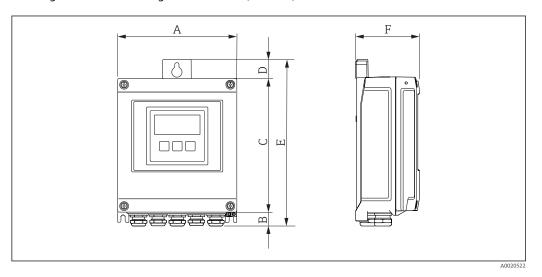


 ${\it Order\ code\ for\ "Transmitter\ housing",\ option\ A\ "Aluminum,\ coated"\ and\ order\ code\ for\ "Integrated\ ISEM"}$ electronics", option A "Digital, sensor"

A	B	C	D	E	F
[in]	[in]	[in]	[in]	[in]	[in]
6.57	0.83	7.36	0.94	9.13	3.15

Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Digital, sensor"

A	B	C	D	E	F
[in]	[in]	[in]	[in]	[in]	[in]
6.97	0.87	7.76	0.67	9.21	3.54

# Housing of Proline 500 transmitter, Zone 1/2 and Div. 1/2

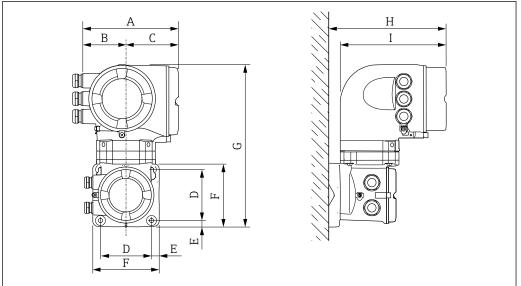

A0029140


Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Analog, transmitter"

A	B	C	D	E	F	G	H	I
[in]								
7.40	3.35	4.06	3.94	0.60	5.12	12.5	9.41	

 $\label{lem:code_for_problem} \textit{Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Analog, transmitter"$ 

A	B	C	D	E	F	G	H	I
[in]								
7.40	3.35	4.06	3.94	0.60	5.12	11.6	9.41	

# Sensor connection housing

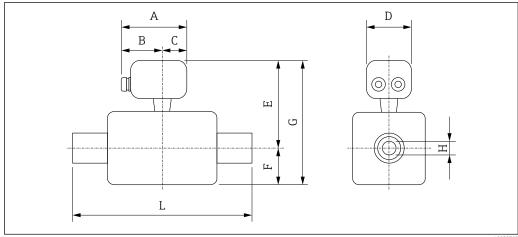

A0029795

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	В	С	D	Е	F	G	Н	L
[in]	[in]								
3/8	5.81	3.68	2.13	5.35	10.3	4.25	14.5	0.211	2)
1/2	5.81	3.68	2.13	5.35	10.3	4.25	14.5	0.33	2)
1	5.81	3.68	2.13	5.35	10.3	4.76	15.0	0.47	2)
1½	5.81	3.68	2.13	5.35	11.2	6.81	18.0	0.69	2)
2	5.81	3.68	2.13	5.35	11.7	9.49	21.1	1.02	2)

- 1) Depending on the cable gland used: values up to +1.18 in
- 2) Dependent on the respective process connection

Order code for "Sensor connection housing", option B "Stainless, hygienic"

DN	A 1)	B 1)	С	D	E	F	G	Н	L
[in]	[in]								
3/8	5.39	3.07	2.32	5.26	10.1	4.25	14.4	0.211	2)
1/2	5.39	3.07	2.32	5.26	10.1	4.25	14.4	0.33	2)
1	5.39	3.07	2.32	5.26	10.1	4.76	14.9	0.47	2)
1½	5.39	3.07	2.32	5.26	11.1	6.81	17.9	0.69	2)
2	5.39	3.07	2.32	5.26	11.5	9.49	21.0	1.02	2)

- 1) Depending on the cable gland used: values up to +1.18 in
- 2) Dependent on the respective process connection

#### Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"

DN	A 1)	B 1)	С	D	E	F <sup>2)3)</sup>	G <sup>2)3)</sup>	Н	L
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	4.88	2.68	2.2	4.39	2.95	7.09	10.04	0.211	4)
1/2	4.88	2.68	2.2	4.39	2.95	7.09	10.04	0.33	4)
1	4.88	2.68	2.2	4.39	2.95	7.09	10.04	0.47	4)
1½	4.88	2.68	2.2	4.39	4.13	7.26	11.4	0.69	4)
2	4.88	2.68	2.2	4.39	5.55	7.66	13.21	1.02	4)
3	4.88	2.68	2.2	4.39	7.87	8.44	16.32	1.59	4)
4	4.88	2.68	2.2	4.39	10	9.17	19.17	2.02	4)
6	4.88	2.68	2.2	4.39	14.88	10	24.88	2.71	4)
10	4.88	2.68	2.2	4.39	21.57	11.71	33.29	4.03	4)

- 1) Depending on the cable gland used: values up to +1.18 in
- 2) If using an extension neck for the extended temperature range, order code for "Sensor option", option CG and order code for "Measuring tube material", option SD, SE, SF, TH, LA: values +2.76 in
- 3) If using an extension neck for the high-temperature range, order code for "Sensor option", option CG and order code for "Measuring tube material", option TT, TU: values +4.09 in
- 4) Dependent on the respective process connection


Order code for "Sensor connection housing", option L "Cast, stai	nless'	stain	"Cast.	L'	ption	", 0	housing	connection	"Sensor	for	code	Order
--	--------	-------	--------	----	-------	------	---------	------------	---------	-----	------	-------

DN	A 1)	В	С	D	E	F	G	Н	L
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
3/8	8.82	6.5	2.32	5.35	11.18	4.25	15.43	0.211	2)
1/2	8.82	6.5	2.32	5.35	11.18	4.25	15.43	0.33	2)
1	8.82	6.5	2.32	5.35	11.18	4.76	15.94	0.47	2)
11/2	8.82	6.5	2.32	5.35	12.13	6.81	18.94	0.69	2)
2	8.82	6.5	2.32	5.35	12.56	9.49	22.05	1.02	2)

- 1) 2) Depending on the cable gland used: values up to +1.18 in Dependent on the respective process connection  $\,$

# Flange connections

# Fixed flange ASME B16.5

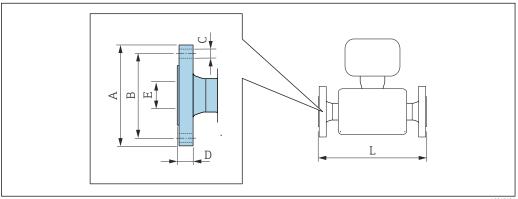

# Length tolerance for dimension L in inch: $+0.06\ /\ -0.08$

Flange according to ASME B16.5: Cl 150 1.4404 (316/316L) Order code for "Process connection", option AAW						
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]
3/8 1)	3.54	2.37	4 × Ø0.62	0.50	0.62	13.23
1/2	3.54	2.37	4 × Ø0.62	0.50	0.62	17.32
1	4.33	3.13	4 × Ø0.62	0.59	1.05	22.83
1½	4.92	3.87	4 × Ø0.62	0.69	1.61	31.26
2	5.91	4.75	4 × Ø0.75	0.93	2.07	42.17
Surface roughness (flange): Ra 125 to 248 μin						


1) DN  $\frac{3}{8}$ " with DN  $\frac{1}{2}$ " flanges as standard

Flange according to ASME B16.5: Cl 300 1.4404 (316/316L) Order code for "Process connection", option ABW						
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]
3/8 1)	3.74	2.63	4 × Ø0.62	0.56	0.62	13.23
1/2	3.74	2.63	4 × Ø0.62	0.56	0.62	17.32
1	4.92	3.50	4 × Ø0.75	0.69	1.05	22.83
11/2	6.10	4.50	4 × Ø0.88	0.81	1.61	31.26
2	6.50	5.00	8 × Ø0.75	0.93	2.07	42.17
Surface roughness (flange): Ra 125 to 248 μin						

1) DN  $\frac{3}{8}$ " with DN  $\frac{1}{2}$ " flanges as standard

#### Accessories

Purge connections / secondary containment monitoring

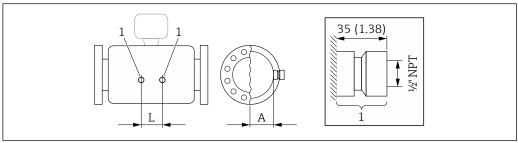


A0029969

Connection nipple for purge connections/pressure vessel monitoring: order code for "Sensor options", option CH "Purge connection"

DN	A	L
[in]	[in]	[in]
3/8	1.85	4.33
1/2	1.85	8.03
1	1.85	13.7
1½	2.64	20.71
2	3.33	30.04

#### External WLAN antenna

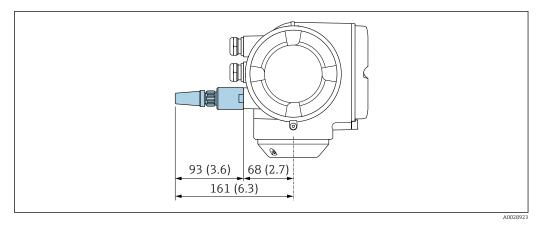

■ 27 Engineering unit mm (in)

Weight

Excluding the transmitter

- $\blacksquare$  Aluminum
  - 6.5 kg (14.3 lbs)
  - Digital: 2.4 kg (5.3 lbs)
- Polycarbonate: 1.4 kg (3.1 lbs)
- Cast, stainless:15.6 kg (34.4 lbs)

Cast connection housing version, stainless: +3.7 kg (+8.2 lbs)

All values (weight) refer to devices with EN/DIN PN 40 flanges.

# Weight in SI units

DN [mm]	Weight [kg]
8	10
15	11
25	17
40	34
50	67

# Weight in US units

DN [in]	Weight [lbs]
3/8	22
1/2	24
1	37
1½	75
2	148

# Materials

# Transmitter housing

Proline 500 – digital transmitter housing

Order code for "Transmitter housing":

- $\, \bullet \,$  Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

#### Proline 500 transmitter housing

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option L "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

#### Window material

Order code for "Transmitter housing":


- Option A "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option L "Cast, stainless": glass

#### Sensor connection housing

Order code for "Sensor connection housing":

- Option A "Aluminum coated": aluminum, AlSi10Mq, coated
- Option **B** "Stainless":
  - Stainless steel 1.4301 (304)
  - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **C** "Ultra-compact, stainless":
  - Stainless steel 1.4301 (304)
  - Optional: Order code for "Sensor feature", option **CC** "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option L "Cast, stainless": 1.4409 (CF3M) similar to 316L

#### Cable entries/cable glands

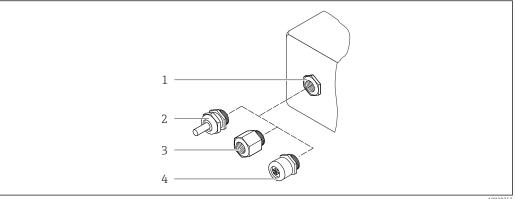

#### ■ 28 Possible cable entries/cable glands

- Cable entry with M20  $\times$  1.5 internal thread
- Cable gland M20 × 1.5
- 3 Adapter for cable entry with internal thread G ½" or NPT ½"
- Device plug coupling

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
<ul> <li>Adapter for cable entry with internal thread G ½"</li> <li>Adapter for cable entry with internal thread NPT ½"</li> </ul>	Nickel-plated brass
Only available for certain device versions:  Order code for "Transmitter housing":  Option A "Aluminum, coated"  Option D "Polycarbonate"  Order code for "Sensor connection housing":  Option A "Aluminum coated"  Proline 500 – digital: Option B "Stainless"  Option C "Ultra-compact hygienic, stainless"	

Cable entries and adapters	Material		
<ul> <li>Adapter for cable entry with internal thread G ½"</li> <li>Adapter for cable entry with internal thread NPT ½"</li> </ul>	Stainless steel, 1.4404 (316L)		
Only available for certain device versions:  Order code for "Transmitter housing": Option L "Cast, stainless"  Order code for "Sensor connection housing": Option L "Cast, stainless"			
Adapter for device plug	Stainless steel, 1.4404 (316L)		
Device plug for digital communication: Only available for certain device versions →   28.			
Device plug coupling	Plug M12 × 1  Socket: Stainless steel, 1.4404 (316L)  Contact housing: Polyamide  Contacts: Gold-plated brass		

#### Connecting cable

Connecting cable for sensor - Proline 500 - digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

#### Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

#### Measuring tubes

- Zirconium 702/R 60702
- Tantalum 2.5W

### **Process connections**

- Stainless steel, 1.4301 (304); wetted parts: zirconium 702, tantalum
- Flanges according to EN 1092-1 (DIN 2501) / according to ASME B16.5 / according to JIS B2220



#### Seals

Welded process connections without internal seals

### Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

WLAN antenna:

ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass

Adapter:

Stainless steel and copper

#### **Process connections**

Fixed flange connections:

- EN 1092-1 (DIN 2501) flange
- EN 1092-1 (DIN 2512N) flange
- ASME B16.5 flange
- IIS B2220 flange



For information on the different materials used in the process connections  $\rightarrow \triangleq 68$ 

#### Surface roughness

All data relate to parts in contact with fluid. Not polished

# Operability

#### Operating concept

#### Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

#### Fast and safe commissioning

- Guided menus ("Make-it-run" wizards) for applications
- Menu quidance with brief explanations of the individual parameter functions
- Device access via Web server
- Optional: WLAN access to device via mobile handheld terminal

#### Reliable operation

- Operation in local language → 🖺 69
- Uniform operating philosophy applied to device and operating tools
- If replacing electronic modules, transfer the device configuration via the integrated memory (integrated HistoROM) which contains the process and measuring device data and the event logbook. No need to reconfigure.

#### Efficient diagnostics increase measurement availability

- Troubleshooting measures can be called up via the device and in the operating tools
- Diverse simulation options, logbook for events that occur and optional line recorder functions

### Languages

Can be operated in the following languages:

- Via local operation
  - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish
- Via Web browser
  - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Arabic, Bahasa (Indonesian), Thai, Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

# Local operation


#### Via display module

Two display modules are available:

- Order code for "Display; operation", option **F** "4-line, backlit, graphic display; touch control"
- Order code for "Display; operation", option **G** "4-line, backlit, graphic display; touch control + WLAN"



Information about WLAN interface  $\rightarrow$   $\blacksquare$  73

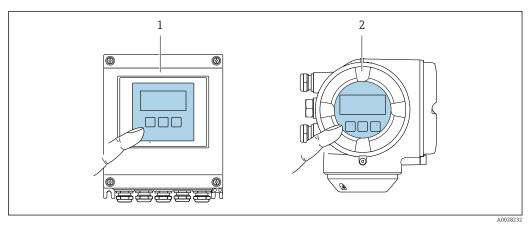

Operation with touch control

- Proline 500 digital
- Proline 500

#### Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.


#### Operating elements

- External operation via touch control (3 optical keys) without opening the housing:  $\boxdot$ ,  $\Box$ ,  $\sqsubseteq$
- Operating elements also accessible in various hazardous areas

# Remote operation


# Via HART protocol

This communication interface is available in device versions with a HART output.

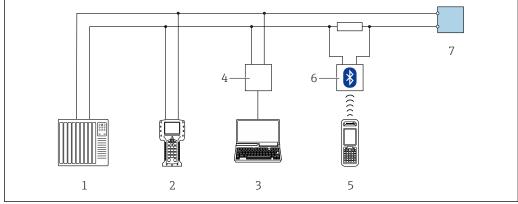

**■** 30 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- Field Communicator 475 2
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or  $computer\ with\ operating\ tool\ (e.g.\ Field Care,\ Device Care,\ AMS\ Device\ Manager,\ SIMATIC\ PDM)\ with\ COM$ DTM "CDI Communication TCP/IP"
- Commubox FXA195 (USB)
- Field Xpert SFX350 or SFX370
- VIATOR Bluetooth modem with connecting cable
- Transmitter

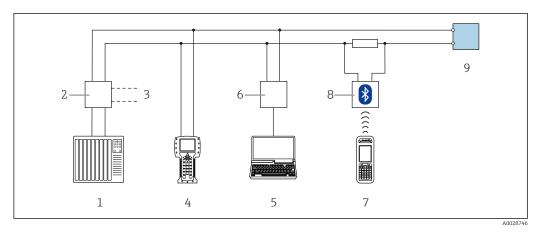


€ 31 Options for remote operation via HART protocol (passive)

- Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- Connection for Commubox FXA195 and Field Communicator 475
- Field Communicator 475
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or  $computer\ with\ operating\ tool\ (e.g.\ Field Care,\ Device Care,\ AMS\ Device\ Manager,\ SIMATIC\ PDM)\ with\ COM$ DTM "CDI Communication TCP/IP"
- Commubox FXA195 (USB)
- Field Xpert SFX350 or SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- Transmitter

#### Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

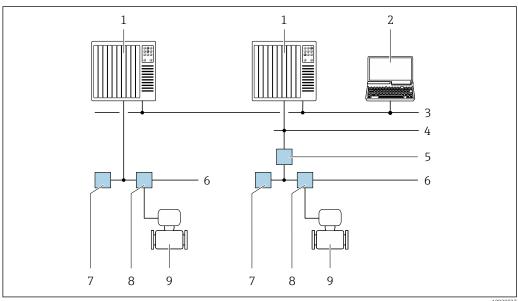


**■** 32 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- High Speed Ethernet FF-HSE network
- Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- Power supply FF-H1 network
- 8 T-box
- Measuring device

#### Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

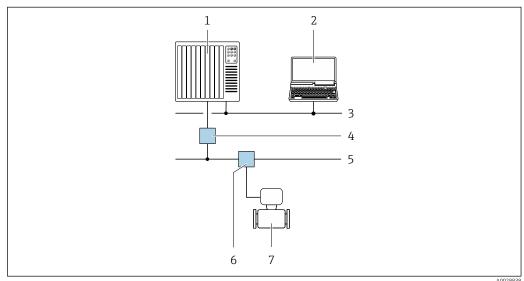


■ 33 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- *3 PROFIBUS DP network*
- 4 Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- 6 T-box
- 7 Measuring device

#### Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus-RS485 output.

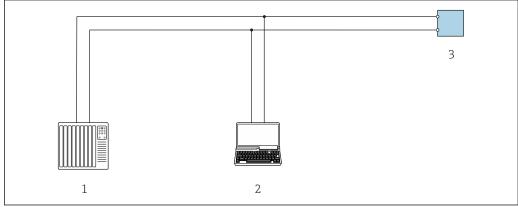

A0029437


 $\blacksquare$  34 Options for remote operation via Modbus-RS485 protocol (active)

- 1 Control system (e.g. PLC)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 3 Transmitter

#### Service interface


## Via service interface (CDI-RJ45)

#### Proline 500 - digital transmitter

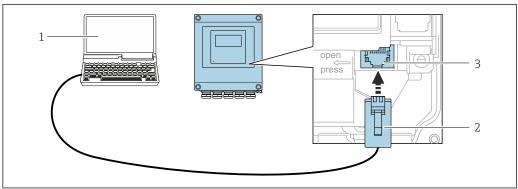

- **■** 35 Connection via service interface (CDI-RJ45)
- Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 connector
- Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

#### Proline 500 transmitter

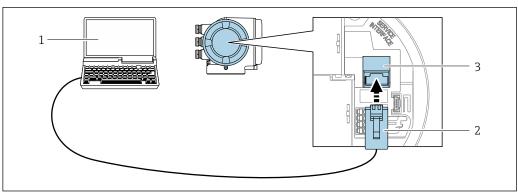


A0027563

- Connection via service interface (CDI-RJ45)
- Computer with Web browser (e.q. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Standard Ethernet connecting cable with RJ45 connector
- Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

#### Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, backlit, graphic display; touch control + WLAN"

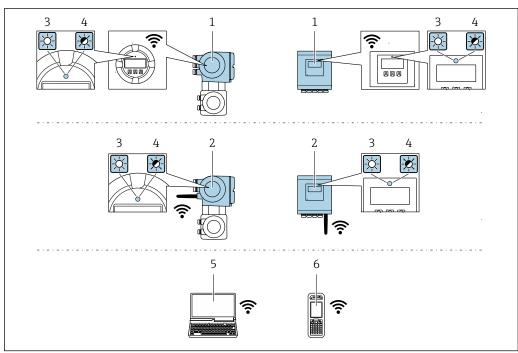

A002916

- $1 \qquad \textit{Transmitter with integrated WLAN antenna}$
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)

Wireless LAN	IEEE 802.11 b/g (2.4 GHz) WLAN
Encryption	WPA2 PSK/TKIP AES-128
Configurable channels	1 to 11
Function	Access point with DHCP
Range with integrated antenna	Max. 10 m (32 ft)
Range with external antenna	Max. 50 m (164 ft)

## Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li></ul>	Special Documentation for the device → 🖺 87
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 85

Supported operating tools	Operating unit	Interface	Additional information
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 85
Device Xpert	Field Xpert SFX 100/350/370	HART and FOUNDATION Fieldbus fieldbus protocol	Operating Instructions BA01202S Device description files: Use update function of handheld terminal



Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- Process Device Manager (PDM) by Siemens → www.siemens.com
- Asset Management Solutions (AMS) by Emerson → www.emersonprocess.com
- FieldCommunicator 375/475 by Emerson → www.emersonprocess.com
- Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
- FieldMate by Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com → Downloads

#### Web server

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the measuring device data can be managed and the network parameters can be configured. The WLAN connection requires a device that acts as an access point to enable communication via a computer or mobile handheld terminal.

### Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Uploading the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file, create documentation of the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance

#### HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

#### Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
Available data	<ul> <li>Event history, such as diagnostic events</li> <li>Parameter data record backup</li> <li>Device firmware package</li> <li>Driver for system integration e.g.:         <ul> <li>DD for HART</li> <li>GSD for PROFIBUS PA</li> <li>DD for FOUNDATION Fieldbus</li> </ul> </li> </ul>	<ul> <li>Measured value memory ("Extended HistoROM" order option)</li> <li>Current parameter data record (used by firmware at run time)</li> <li>Maximum indicators (min/max values)</li> <li>Totalizer values</li> </ul>	<ul> <li>Sensor data: diameter etc.</li> <li>Serial number</li> <li>User-specific access code (to use the "Maintenance" user role)</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface board in the connection compartment	Can be plugged into the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

### Data backup

#### **Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors

#### Manual

Additional parameter data record (complete parameter settings) in the integrated device memory for:

- Data backup function
  - Backup and subsequent restoration of a device configuration in the device memory
- Data comparison function
   Comparison of the current device configuration with the device configuration saved in the device memory

#### Data transfer

#### Manual

Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)

## **Event list**

#### Automatic

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

### Data logging

### Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or Web server
- Use the recorded measured value data in the integrated device simulation function in the Diagnostics submenu.

### Service logbook

#### Manual

- Create up to 20 user-specific events with a date and customized text in a separate logbook for documentation of the measuring point
- Use for calibration or service operations, for example, or for maintenance or revision work that has been performed

## Certificates and approvals

#### **CE** mark

The measuring system is in conformity with the statutory requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

#### C-Tick symbol

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

#### Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.



The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

## Proline 500 - digital

#### ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

#### Ex ia

Transmitter			Sensor
Category	Type of protection	Category	Type of protection
II(1)G	[Ex ia] IIC	II1/2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb
II(1)G	[Ex ia] IIC	II2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II1/2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb

## Ex tb

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
II(1)D	[Ex ia] IIIC	II2D	Ex ia tb IIIC T** °C Db

#### Non-Ex / Ex ec

Transmitter			Sensor
Category	Type of protection	Category	Type of protection
Non - Ex	Non-Ex	II3G	Ex ec IIC T5T1 Gc
II3G	Ex ec IIC T5T4 Gc	II3G	Ex ec IIC T5T1 Gc

## $_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

## IS (Ex nA, Ex i)

Transmitter	Sensor
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups A-G
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups C-G

## NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Group	s A - D

## Ex nA / Ex i

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

## Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

## Ex tb

Transmitter	Sensor
[AEx / Ex ia ] IIIC	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

## Proline 500

## ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

## Ex db eb

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
II2G	Ex db eb ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db eb ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb
II2G	Ex db eb ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db eb ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

## Ex db

Transmitter			Sensor
Category	Type of protection	Category	Type of protection
II2G	Ex db ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
II2G	Ex db ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

## Ex tb

Category	Type of protection	
	Transmitter	Sensor
II2D	Ex tb IIIC T85°C Db	Ex ia tb IIIC T** °C Db

#### Ех ес

Category	Type of protection	
	Transmitter	Sensor
II3G	Ex ec IIC T5T4 Gc	Ex ec IIC T5T1 Gc

## $_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

## IS (Ex i) and XP (Ex d)

Transmitter	Sensor
Class I, III, III Division 1 Groups A-G	
Class I, III, III Division 1 Gr	oups C-G

## NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups	ABCD

## Ex de

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex de ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex de ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

## Ex d

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex d ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex d ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

#### Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

#### Ex tb

Transmitter	Sensor
Zone 21 AEx/ Ex tb IIIC T85°C Db	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

#### **Functional safety**

The measuring device can be used for flow monitoring systems (min., max., range) up to SIL 2 (single-channel architecture; order code for "Additional approval", option  $\bf LA$ ) and SIL 3 (multichannel architecture with homogeneous redundancy) and is independently evaluated and certified by the  $T\ddot{U}V$  in accordance with IEC 61508.

The following types of monitoring in safety equipment are possible:

- Mass flow
- Volume flow
- Density



Functional Safety Manual with information on the SIL device  $\rightarrow \triangleq 86$ 

#### **HART** certification

#### **HART** interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

# FOUNDATION Fieldbus certification

#### FOUNDATION Fieldbus interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.1.2 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### **Certification PROFIBUS**

#### **PROFIBUS** interface

The measuring device is certified and registered by the PROFIBUS User Organization (PNO). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with PROFIBUS PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### Modbus RS485 certification

The measuring device meets all the requirements of the MODBUS/TCP conformity test and has the "MODBUS/TCP Conformance Test Policy, Version 2.0". The measuring device has successfully passed all the test procedures carried out.

# Pressure Equipment Directive

The devices can be ordered with or without a PED approval. If a device with a PED approval is required, this must be explicitly stated in the order. For devices with nominal diameters less than or equal to DN 25 (1"), this is neither possible nor necessary.

- With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EC.
- Devices bearing this marking (PED) are suitable for the following types of medium:
  - Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
  - Unstable gases
- Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Art. 4, Par. 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EC.

#### Radio approval

Europe:

RED 2014/53/EU

United States of America: CFR Title 47. FCC Part 15.247

Canada:

RSS-247 Issue 1

Japan:

Article 2 clause 1 item 19



Additional country-specific approvals on request.

#### Additional certification

#### CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

#### Tests and certificates

- Pressure test, internal procedure, inspection certificate
- 3.1 Material certificate, wetted parts and secondary containment, EN10204-3.1 inspection certificate
- PMI test (XRF), internal procedure, wetted parts, EN10204-3.1 inspection certificate
- EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report

# Other standards and guidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

NAMUR NE 80

The application of the pressure equipment directive to process control devices

NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

■ NAMUR NE 132

Coriolis mass meter

## Ordering information

Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: www.endress.com -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
- From your Endress+Hauser Sales Center: www.addresses.endress.com

## i

## $\label{lem:configuration} \textbf{Product Configuratior} \ \textbf{-} \ \textbf{the tool for individual product configuration}$

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

## Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: <a href="https://www.endress.com">www.endress.com</a>.



Detailed information on the application packages: Special Documentation for the device

#### **Diagnostics functions**

Package	Description
Extended HistoROM	Comprises extended functions concerning the event log and the activation of the measured value memory.
	Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.
	<ul> <li>Data logging (line recorder):</li> <li>Memory capacity for up to 1000 measured values is activated.</li> <li>250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user.</li> <li>Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.</li> </ul>

## Heartbeat Technology

Package	Description
Heartbeat Verification +Monitoring	Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:  Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time.  Schedule servicing in time.  Monitor the process or product quality, e.g. gas pockets.
	Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".  Functional testing in the installed state without interrupting the process.  Traceable verification results on request, including a report.  Simple testing process via local operation or other operating interfaces.  Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.  Extension of calibration intervals according to operator's risk assessment.

Con		

Package	Description
Concentration measurement and special density	Calculation and outputting of fluid concentrations  Many applications use density as a key measured value for monitoring quality or controlling processes. The device measures the density of the fluid as standard and makes this value available to the control system.  The "Special Density" application package offers high-precision density measurement over a wide density and temperature range particularly for applications subject to varying process conditions.
	With the help of the "Concentration Measurement" application package, the measured density is used to calculate other process parameters:  Temperature-compensated density (reference density).  Percentage mass of the individual substances in a two-phase fluid. (Concentration in %).  Fluid concentration is output with special units ("Brix, "Baumé, "API, etc.) for standard applications.

## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

## Device-specific accessories

#### For the transmitter

Accessories	Description		
Transmitter Proline 500 Proline 500 – digital	Transmitter for replacement or storage. Use the order code to define the following specifications:  Approvals  Output  Input  Display / operation  Housing  Software  For details, see Installation Instructions EA01150  For details  Proline 500 – digital transmitter: Installation Instructions EA01151  Proline 500 transmitter: Installation Instructions EA01152  Proline 500 transmitter for replacement: the serial number of the current transmitter should always be quoted when ordering. On the basis of the serial number, the device-specific data of the replacement device can also be used for the new transmitter.		
WLAN antenna Wide range	External WLAN antenna for a range of up to 50 m (165 ft).  ■ Further information on the WLAN interface →   73.		
Post mounting kit	Post mounting kit for transmitter.  The post mounting kit can only be ordered together with a transmitter.		
Protective cover Proline 500	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  For details, see Installation Instructions EA01160		
Display guard Proline 500 – digital	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  For details, see Installation Instructions EA01161		

Connecting cable Proline 500 – digital Sensor – Transmitter	The following cable lengths are available: order code for "Cable, sensor connection"  Option B: 20 m (65 ft)  Option E: User configurable up to max. 50 m  Option F: User configurable up to max. 165 ft  Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)
Connecting cable Proline 500 Sensor – Transmitter	The following cable lengths are available: order code for "Cable, sensor connection"  Option 1: 5 m (16 ft)  Option 2: 10 m (32 ft)  Option 3: 20 m (65 ft)  Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)

## For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor.  Water, water vapor and other non-corrosive liquids are permitted for use as fluids.  If using oil as a heating medium, please consult with Endress+Hauser.  For details, see Operating Instructions BA00099D

# Communication-specific accessories

Accessories	Description		
Commubox FXA195	For intrinsically safe HART communication with FieldCare via the USB interface.		
HART	For details, see "Technical Information" TI00404F		
HART Loop Converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.		
	For details, see "Technical Information" TI00429F and Operating Instructions BA00371F		
Fieldgate FXA320	Gateway for the remote monitoring of connected 4 to 20 mA measuring devices via a Web browser.		
	For details, see "Technical Information" TI00025S and Operating Instructions BA00053S		
Fieldgate FXA520	Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser.		
	For details, see "Technical Information" TI00025S and Operating Instructions BA00051S		
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the <b>non-Ex area</b> .		
	For details, see Operating Instructions BA01202S		
Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices in the <b>non-Ex area</b> and the <b>Ex area</b> .		
	For details, see Operating Instructions BA01202S		

Accessories	Description	
Applicator	Software for selecting and sizing Endress+Hauser measuring devices:  Choice of measuring devices for industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy.  Graphic illustration of the calculation results  Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.  Applicator is available:  Via the Internet: https://wapps.endress.com/applicator  As a downloadable DVD for local PC installation.	
W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.  W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.  Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement	
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. E using the status information, it is also a simple but effective way of checking their status and condition.  For details, see Operating Instructions BA00027S and BA00059S	
DeviceCare	Tool for connecting and configuring Endress+Hauser field devices.  For details, see Innovation brochure IN01047S	

## System components

Accessories	Description
Memograph M graphic display recorder	The Memograph M graphic display recorder provides information on all relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	For details, see "Technical Information" TI00133R and Operating Instructions BA00247R
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	For details, see "Technical Information" TI00426P, TI00436P and Operating Instructions BA00200P, BA00382P
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	For details, see "Technical Information" TI00383P and Operating Instructions BA00271P
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the fluid temperature.
	For details, see "Fields of Activity", FA00006T

## Supplementary documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

The W@M Device Viewer: Enter the serial number from the nameplate

- (www.endress.com/deviceviewer)
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

#### Standard documentation

## **Brief Operating Instructions**

## Part 1 of 2: Sensor

Measuring device	Documentation code
Proline Promass	KA01212D

### Part 2 of 2: Transmitter

	Documentation code			
Measuring device	HART	FOUNDATION Fieldbus	PROFIBUS PA	Modbus RS485
Proline 500	KA01230D	KA01233D	KA01231D	KA01232D

## **Operating Instructions**

Measuring device	Documentation			
	HART	FOUNDATION Fieldbus	PROFIBUS PA	Modbus RS485
Promass H 500	BA01530D	BA01563D	BA01552D	BA01541D

## Description of device parameters

Measuring device	Documentation code
Promass 500	GP01060D
Promass 500	GP01096D
Promass 500	GP01061D
Promass 500	GP01062D

## Supplementary devicedependent documentation

## **Safety Instructions**

ntents Documentation code	
	Measuring device
ATEX/IECEx Ex i	XA01473D
ATEX/IECEx Ex ec	XA01474D
cCSAus IS	XA01475D
cCSAus Ex i	XA01509D
cCSAus Ex nA	XA01510D
INMETRO Ex i	XA01476D
INMETRO Ex ec	XA01477D
NEPSI Ex i	XA01478D
NEPSI Ex nA	XA01479D

#### Special documentation

Contents	Documentation code	
Information on the Pressure Equipment Directive	SD01614D	
Functional Safety Manual	SD01729D	

Contents	Documentation			
	HART	FOUNDATION Fieldbus	PROFIBUS PA	Modbus RS485
Web server	SD01666D	SD01669D	SD01668D	SD01667D
Heartbeat Technology	SD01643D	SD01608D	SD01705D	SD01704D
Concentration measurement	SD01645D	SD01709D	SD01711D	SD01710D

#### **Installation Instructions**

Contents	Documentation code	
Installation Instructions for spare part sets	Specified for each individual accessory	

## Registered trademarks

#### **HART**®

Registered trademark of the FieldComm Group, Austin, Texas, USA

#### PROFIBIIS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

#### FOUNDATION<sup>TM</sup> Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

## $Modbus^{\otimes}$

Registered trademark of SCHNEIDER AUTOMATION, INC.

Applicator®, FieldCare®, DeviceCare®, Field XpertTM, HistoROM®, TMB®, Heartbeat TechnologyTM

Registered or registration-pending trademarks of the Endress+Hauser Group



